

Aerohive Devices QuickStart

Install Aerohive devices (APs, switches, and routers) on your network.


For detailed installation instructions and specifications for your device, visit www.aerohive.com/quick or scan this QR code with your phone to take you right there.



1 Power

Connect the Aerohive device to a power source: a 100-240 AC power outlet, or, for APs, PSE (power sourcing equipment).

Aerohive device

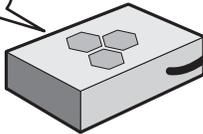

Power source




For Aerohive APs, attach external antennas, if necessary.

2 Network

Aerohive AP or switch: Connect an Ethernet cable from Eth0 on an AP and from any port on a switch to an upstream network device - switch, router, firewall...

Aerohive router: Connect an Ethernet cable from WAN/Eth0 to a DSL router, cable modem, or other Internet device.

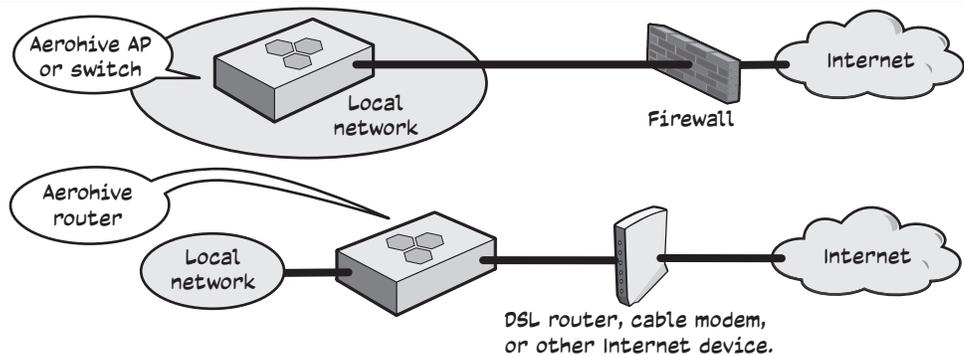


ⓘ Aerohive devices act as DHCP clients by default. For deployment on networks without DHCP, see product documentation at www.aerohive.com/techdocs.


3 Management

After connecting to the network, the Aerohive device contacts HiveManager Online or a HiveManager physical appliance or HiveManager Virtual Appliance on premises. The device is now ready to be managed.

 Aerohive device




Host name: AH-123456

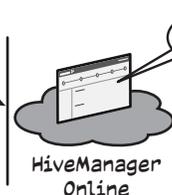

HiveManager Online

OR

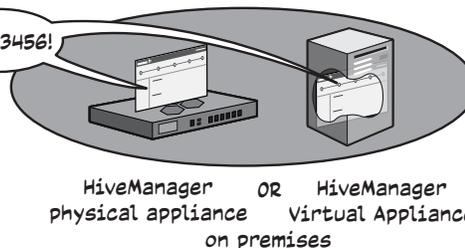

HiveManager physical appliance OR HiveManager Virtual Appliance on premises

ⓘ After the device connects to HiveManager, the status LED glows white.

To register, get the latest product documentation (including a limited number of translations), see compliance information and download software updates, visit www.aerohive.com/support.