



HD 720P

HD 720P 4 Camera CCTV System



User Guide

Version 1

SAFETY INSTRUCTION

- **Check the input voltage (AC100V–AC240V) to the power supply module before connecting it.**
- **Do not install the equipment in an environment with too much moisture, dust or smoke dust as this may result in fire or electric shock.**
- **In the unlikely event that the equipment should malfunction and emit an abnormal smell of smoke, please immediately stop it, shut off the power and contact your supplier.**
- **Please do not place this equipment near a heat source to avoid risk of fire.**
- **Please do not store, install and use this product in danger areas with inflammable or explosive substances.**
- **Please make sure the power is turned off when installing the product.**
- **Please ensure that you install the IQDVR in an area with good ventilation.**
- **Please do not use the IQDVR in an environment where temperatures that exceed either -20°C to +55°C.**

Chapter 1 Function Descriptions and Features

Function	Brief Description
Real time monitoring	Supported outputs, VGA and HDMI, supports real-time monitoring by XIQCMS Windows software CMS and Smart phone XIQCMS, supports electronic amplifier, multi-screen sequence and PIP display.
Recording	Video compression H.264, The video quality, resolution of each channel and video frame rate are adjustable. Support many recording modes, such as start-up recording, timing recording, manual recording, alarm recording, motion detection recording, remote recording, etc.
Record storage	Supports high capacity 6TB single HDD with SATA port.
Record playback	Supports single-channel or multi-channel search and playback through the IQDVR or network.
Record backup	Backup records from the IQDVR to USB flash disk, mobile HDD and disk burner; or from network to HDD.
Network operation	Supports authorized accessing of remote client to ensure the system security.
Mouse operation	Supports USB mouse operation to set system parameters conveniently and efficiently.
PTZ control	Supports PTZ decoder communicated through RS485. Can expand two kinds of decoding protocol to communicate with PTZ and dome camera control. Support PTZ preset auto cruise function.

Table 1-1

1.1 IQDVR Features:

- H.264 video compression format, Supports, AHD720P and 960H camera inputs.
- Full real-time six functions (preview, recording, playback, backup, network monitoring, and mobile phone monitoring)
- Supports dual-stream network transmission
- USB2.0 port - supports backup, burning, software upgrading, mouse operation, etc.
- Supports infra-red remote control
- Supports multi-language
- Supports automatic system maintenance

1.2 Camera Features:

- Full HD 720P resolution
- 20m IR night vision
- Vandal resistant (Dome Only)
- Wide-angle lens
- Cable managed bracket
- Small/unobtrusive design
- Weatherproof (IP66 rated)

Chapter 2 Camera Installation

2.1 Bullet Camera Installation

The IQC720B camera can be wall or ceiling mounted. To install the camera, please follow the steps below.

1. Select a suitable position on the wall or ceiling to install the camera. Use the camera bracket as a stencil and mark out holes to be drilled.



2. using the correct drill bit for the type of wall, drill the holes out in the wall or ceiling. If you wish to run the wire through the wall, you will also need to drill a hole for the wires to go.

3. When the holes have been drilled, feed the wires through the hole or cable managed bracket. Then, put the screws through the holes in the bracket and screw into the wall.



4. To adjust the camera angle, loosen the bracket of the camera with a crosshead screwdriver. It would be advised to use a test monitor when choosing the angle, to get the perfect angle for your application.




5. Once you have found the correct angle, tighten the bracket again using the screwdriver, as shown right.



2.1 Dome Camera Installation

The IQC720V camera can be wall or ceiling mounted. To install the camera, please follow the steps below.

1. Select a suitable position on the wall or ceiling to install the camera. Take the mounting bracket off the dome camera by unscrewing the fixing screw using the Allen key supplied.

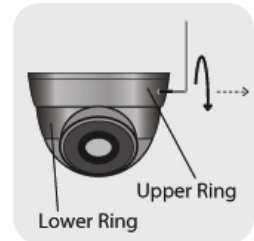


2. Rotate the upper ring of the camera, it will unscrew from the dome base. Be careful when handling the camera as the parts are not fixed to the upper ring or the camera 'ball'.



3. Using the Dome base as a guide, drill a hole in the middle of the base circle on the wall or ceiling where the camera is to be mounted, to allow the power and video cable to be fed through.


4. Screw the Dome base to the wall or ceiling using the Wall Plugs and screws supplied.

5. Feed the Camera's cable through the hole and adjust the Camera 'ball' so the camera is positioned in the correct direction and at the correct angle.

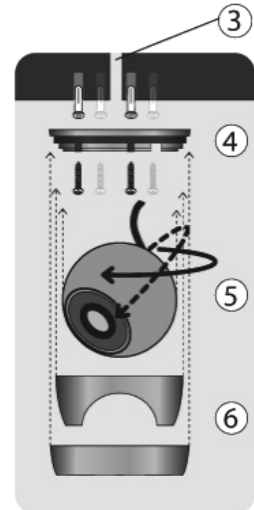

6. When the camera is in the correct position, put the upper and lower ring of the camera back into position. Secure the upper ring back onto the base to secure the camera in place.

7. Connect the power terminal of the camera to the DC socket on the supplied PNP cable, connect the camera video output to the BNC socket on the supplied PNP cable. Connect the other end of the cables to the supplied 12V DC regulated PSU and the Video input on the IQDVR. *please note these can only be connected one way, check connections before running through your walls.'

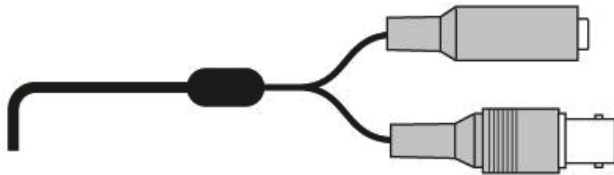


Power Cable 12v DC Input

BNC Video Cable


Chapter 3 Overview of IQDVR

3.1 Rear Panel

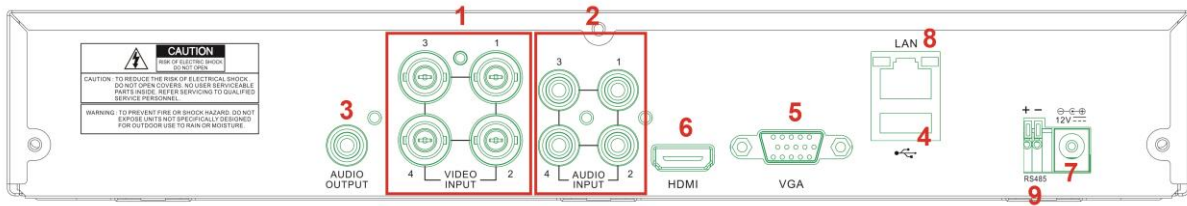

SN	Physical Interface	Connection
1	Video input	Connect with CH1-4 or CH1-8 (analog) video input device, standard BNC port
2	Audio input	Connect with CH1-4 audio input signals, RCA port
3	Audio output	Audio signal output, RCA port
4	USB port	Connect with U flash disk, disk burner, and other USB storage devices
5	VGA port	Connect with VGA display devices, such as PC monitor
6	HDMI port	Connect with HDMI display devices, such as PS monitor
7	Power port	Connect with the power supply DC12V 2A, attached with the machine
8	LAN: Network port	Connect with LAN, Ethernet and RJ45 port.
9	Power switch	Turn on /off power supply

3.2 Remote Controller

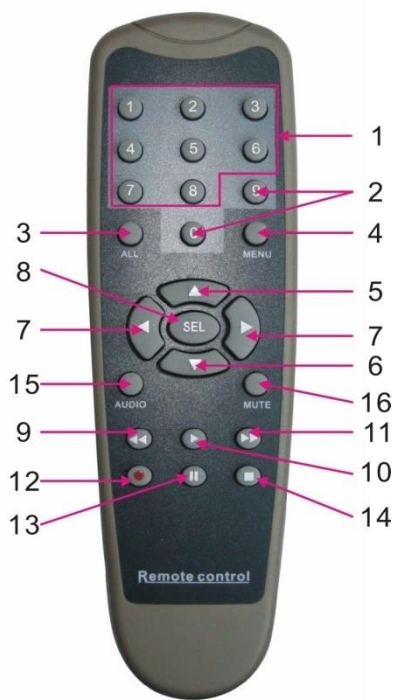

SN	Buttons	Functions
1	1-8	Channel1-8; Numerical key
2	9、0	Numerical key
3	ALL	Multi-channel display
4	Menu	Enter into main menu/Return
5	▲	Move up; Volume adjustment
6	▼	Move down; Volume adjustment
7	◀▶	Move left/right; Decrease/increase parameter value on the control bar
8	SEL	Select/Edit; Confirm the selection
9	◀◀	Fast backward
10	▶	Enter into Record Search menu; Play
11	▶▶	Fast forward
12	●	Record key
13		Pause/Sequence key
14	■	Stop manual recording; Stop playing
15	Audio	Testing
16	Mute	Mute on/off

Table 2-3

Chapter 4 IQDVR Connection

4.1 HDD Installation

(1) Make sure your IQDVR is not powered, now you can remove the screws on both sides of the IQDVR and the rear panel. Slide the cover away from the front panel and lift off.

(2) Within the IQDVR original box you will have the SATA cable for data and a Molex cable for power, connect these to the main board. Install the HDD and screw it down using the provided screws. Once secure please connect the cables to the back of the HDD.

(3) You can now place the cover back on, please take care to put all screws back into the holes they came from.

4.2 Camera and Monitor Connection

The IQDVR video output signals are transmitted to VGA monitor or HDMI monitor by VGA or HDMI cable.

4.3 Power Supply Connection

Please use only the supplied power adapter to connect to the IQDVR. Please refer to table showing rear connections above.

Chapter 5 IQDVR Boot up

5.1 System Initialization

After connecting the power cable of IQDVR to wall outlet and pressing the power button, you will enter into the IQDVR system initializing screen shown as Picture 4-1.



Picture 4-1

5.2 Start-up Wizard


Once booted you will be greeted with the startup wizard, if you do not want to see this wizard again after you have completed it, you may click “Don't show this window next time” to cancel.

Wizard setting menu includes: Homepage, Network setup, Record Schedule and HDD.

1. Homepage and network setup. In network setup page, set the network environment of IQDVR, as shown in Picture 4-3




Picture 4-2

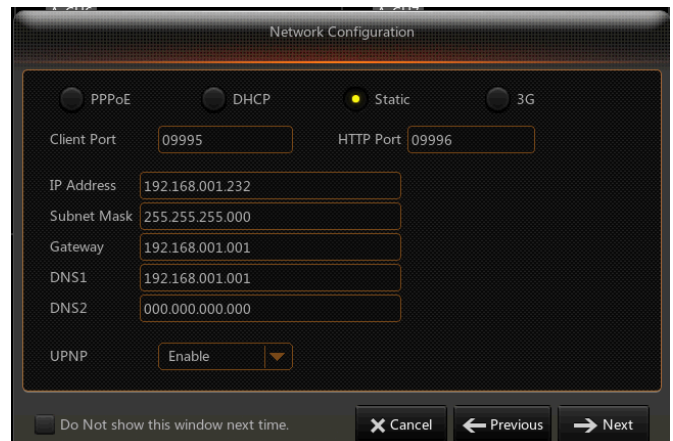


Picture 4-3

2. Record Schedule (Picture 4-4). Set recording time and scheduled recording of IQDVR.

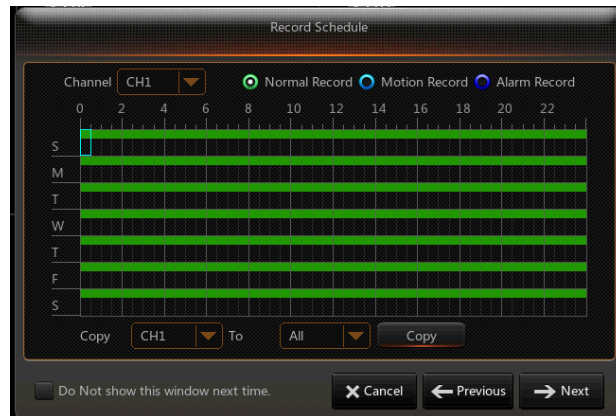

Picture 4-4

3. HDD Management (Picture 4-5). HDD format and overwrite type.

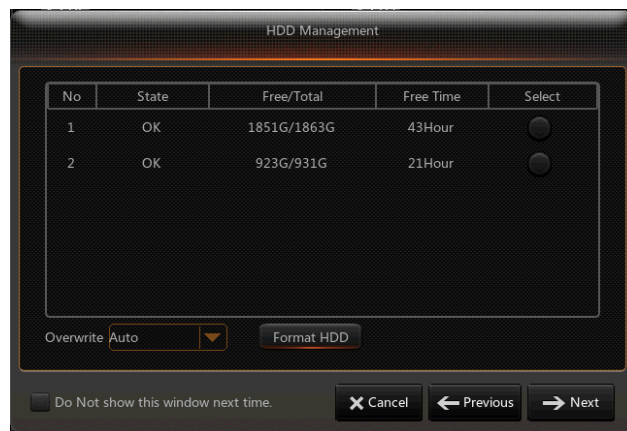

Picture 4-5

5.3 Main Interface



Picture 4-6

Note: When internal HDD is not connected to IQDVR, the character “H” will appear on the lower part of the main interface and accompany buzzer alarm. If you want to disable the buzzer alarm, please enter [Event→Alarm] to disable HDD loss alarm, HDD space insufficiency alarm and set alarm output to “off”.

Chapter 6 IQDVR Menu

Popup Menu


After finishing with the system wizard, right click the mouse, this will show the preview interface or slide the mouse to the bottom of screen to enter into Pop-up Menu.

Now you can make system changes in the Main Menu, The options in the pop-up menu may be varied slightly according to different parameter settings. The options in the menu will be explained in detail in the following chapters.




Picture 5-1

6.1 Main Menu Guide

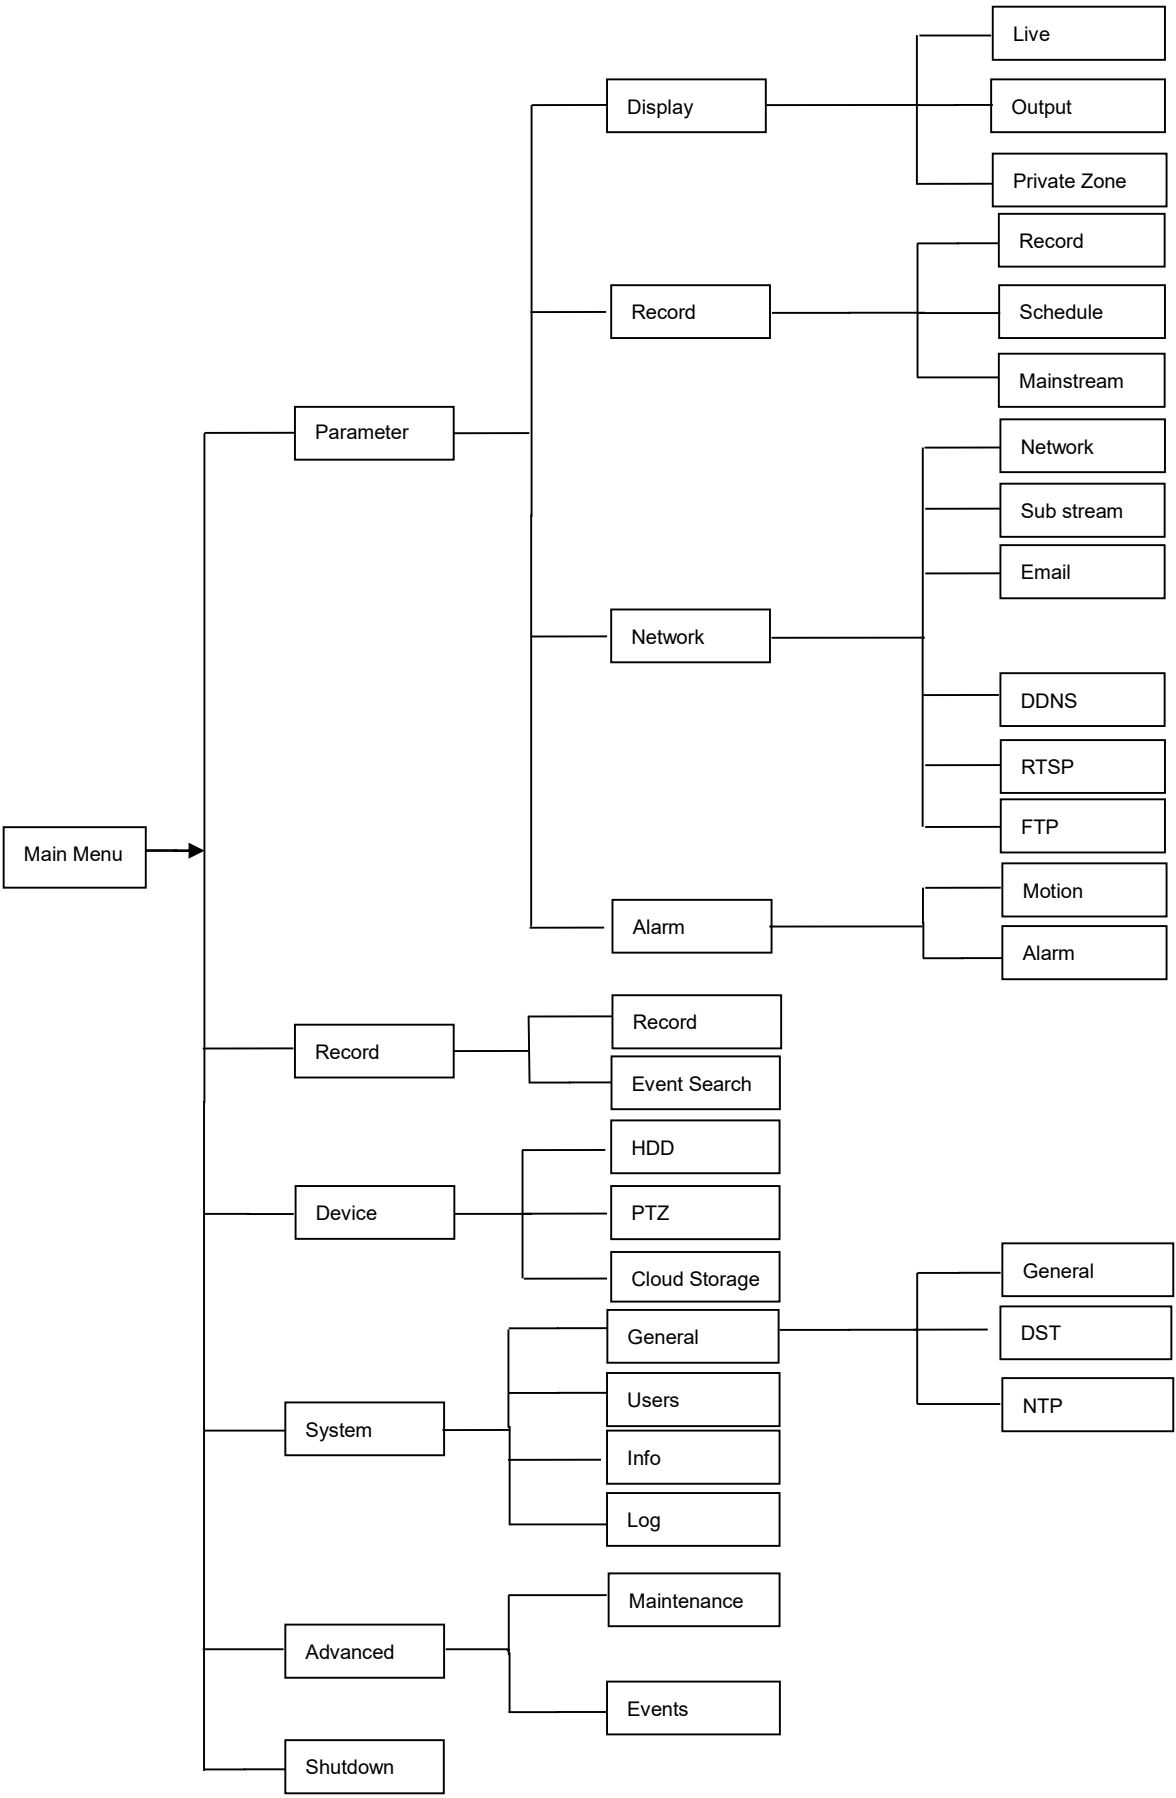


6.2 Main Menu

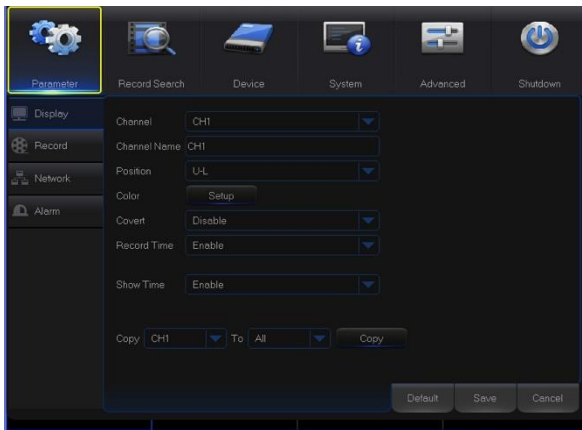

Picture 5-2

On LIVE mode, click the mouse button, or [Menu]

button on the remote controller, or click [] icon on the toolbar to enter the main menu screen, as shown in Picture 5-2.


If system interface is locked, refer to section 4.3 to unlock by inputting password.

In Main Menu mode, you can change the following settings for Parameter, Record Search, Device, System, Advanced and Shutdown.

6.2.1 Parameter


1. Live

Go to “Main Menu” → “Parameter” → “Display” → “Live” to enter into the interface shown as Picture 5-3.

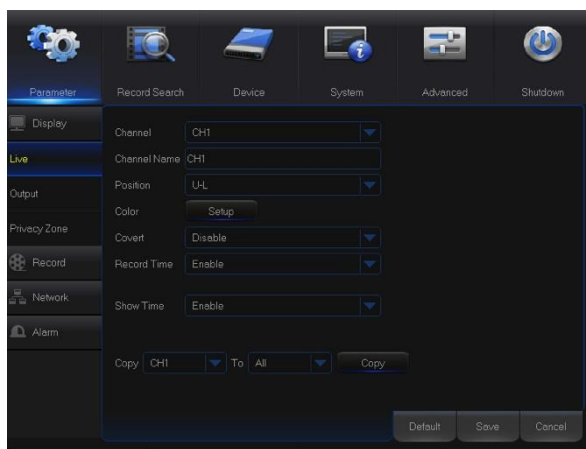

Picture 5-3

- **Channel:** Select the channel in the drop-down list.
- **Channel Name:** Channel name, support up to 8 characters or 4 Chinese characters.
- **Position:** Set the position for the channel display
- **Color:** Click “Setup” to enter into the color setting page (Picture 5-4)
- **Image hiding:** Enable or disable the channel real-time monitoring
- **Show Time:** Enable or disable the system time display in the live interface.
- **Copy:** Copy the parameters in the channel to any other channel or all channels.
- **Record Time:** Enable or disable displaying system time in recording.
- **Copy:** Copy the setting parameter of a channel to another channel.

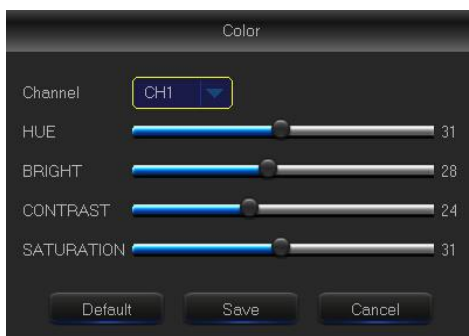


Adjust the brightness, hue, contrast and saturation of the image in selected channel in “Live” interface.

Note: To modify the parameter value in sub-menu and make it effective, click “Save” after modification and a dialog box with message “parameters have been successfully saved” will pop up. Click “OK” in the interface and click “Exit” to exit the menu. If you want to cancel the modification, click “Cancel” to exit.

2. Output

Go to “Main Menu”→ “Parameter”→ “Display”→ “Output” to enter into the interface shown as Picture 5-5.

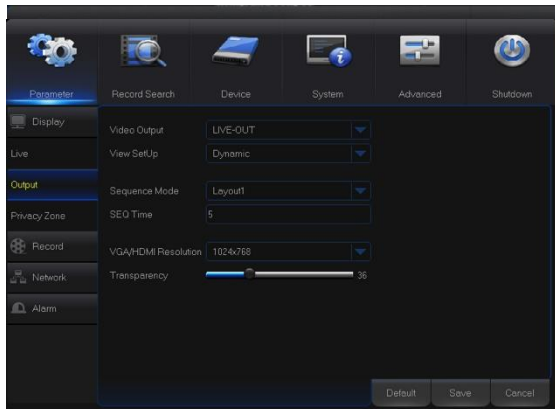


- **Video Output:** Live Output
- **Sequence Mode:** Set sequence mode
- **SEQ Time:** Sequence time is set 5 seconds by default. User may set it as required
- **VGA/HDMI Resolution:** For VGA output or HDMI output, the optional resolution include 800×600, 1024×768, 1280×1024, 1440×900, 1920×1080
- **Transparency:** Adjust menu transparency in the range of 0--128.

3. Private Zone

Go to “Main Menu” → “Parameter” → “Display” → “Private Zone” to enter into the interface shown as in Picture 5-6.

Privacy Zone is for setting some invisible parts in the selected channel, as shown in Picture 5-6 and Picture 5-7.

1. Select the number of the zone to be set (maximum 4 zones can be set for single channel)
2. Click “Setup” to adjust the position of the zone.
3. After finish setting, right click the mouse to return to the “**Privacy Zone**” page.
4. Click “Save” to save the setting.

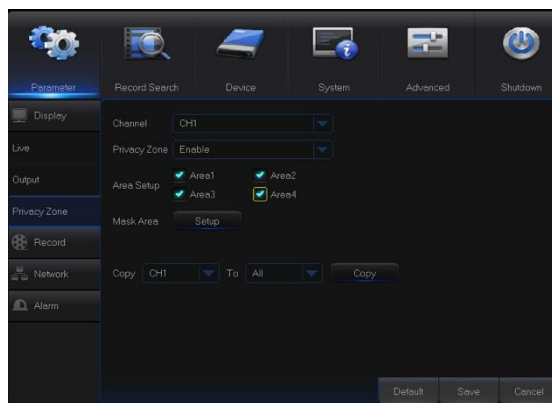


Picture 5-6



Picture 5-7

4. Record

Go to “Main Menu” → “Parameter” → “Record” → “Record” to enter into the interface shown as Picture 5-8.

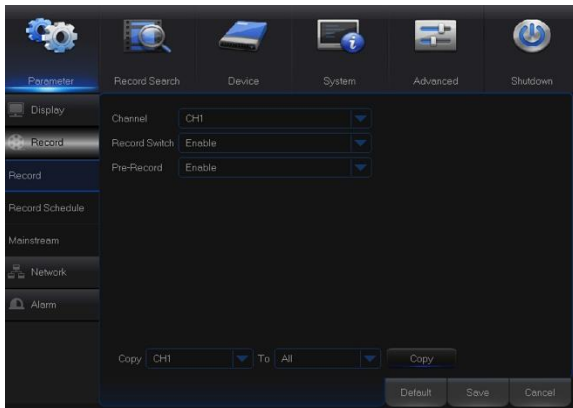


Picture 5-8

- **Channel:** Set the desired channel in the drop-down menu
- **Record Switch:** Enable/disable record
- **Pre Record:** Enable to pre-record motion detection or I/O trigger record.

5. Record Schedule

Go to “Main Menu” → “Parameter” → “Record” → “Record Schedule” to enter into the Record Schedule interface to make record schedule for IQDVR, as shown in Picture 5-9.

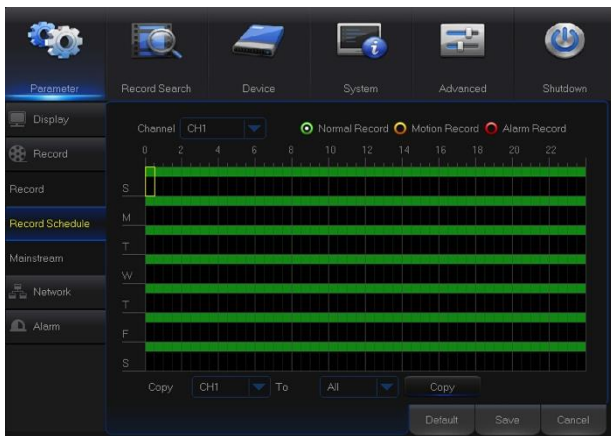

Picture 5-9

Select the channel and the date to be set. One week’s schedule can be set.

The record schedule of the current channel can be copied to any other channel or all channels.

Note:

1. In the Record menu and Record Search menu, No Color stands for no record;
2. “Green” stands for normal record and “yellow” stands for motion record
3. “Red” stands for alarm record,

6. Mainstream

Go to “Menu” → “Parameter” → “Record” → “Mainstream” to enter into the menu interface, as shown in Picture 5-10 on the following page.



Picture 5-10


“Main Menu” → “Record” → “Mainstream”

- **Mode:** Support AHD, 960H and D1. Select a resolution, save and exit main menu. Then the system will automatically restart to take effect.
- **Resolution (960H):** Support three kinds of picture quality: WD1, WHD1, and WCIF.
- **Resolution (D1):** Support three kinds of picture quality: D1, HD1, and CIF.
- **Note:** In AHD series, the supported record resolution includes 960H/720P;
- **FPS:** PAL: 1--25f/s; NTSC: 1--30f/s.
- **Bitrate:** Bitrate for local storage. User may select in the drop down list.
- **Audio:** Check the box to record channel audio during recording and there will be audio output during playing record. Un-check the box to disable recording audio and there will be no audio output during playing the record

7. Network

Go to “Main Menu” → “Parameter” → “Network” → “Network” to enter the interface shown as Picture 5-11.

Select a kind of network connection (PPPOE, DHCP, and Static) and set Port, and user may remotely control the monitoring, recording, playback or backup of IQDVR through network.

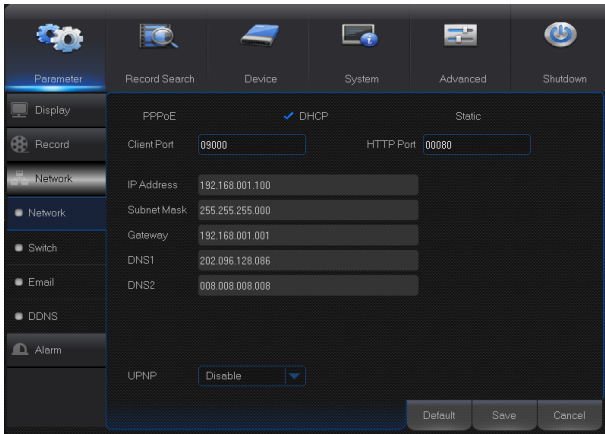

Picture 5-11

Take DHCP as an example. In this mode, the router automatically assigns IP address for IQDVR. After restarting IQDVR or DHCP server, the IP address obtained by IQDVR may be different. As a result, user shall check IP address and port number for each remote access of IQDVR. The operation procedure is as follows:


1. Select DHCP, click Save and refresh IQDVR. Input Client Port and HTTP Port (the two values must not be the same).
2. Set obtained IP address of IQDVR and the mapping port. Refer to section 4.2.4.2.
3. Remotely visit IQDVR by IP address:
http://Public network IP: Web port number (such as 00080)
http:// Intranet IP: Web port number (such as 00080) (Only available in the same LAN)

For PPPoE, Static and DHCP, after setting IP address of IQDVR, the extranet port shall be mapped on the router before visiting IQDVR through public network.

Note: Save after setting to make effective. If there are multiple IQDVR s in a LAN, make sure their MAC addresses are different (Refer to System), for help with Network setup please contact your System Administrator.

8. Sub stream

Go to “Main Menu” → “Parameter” → “Network” → “Sub stream” to enter into the interface shown as Picture 5-12 on the following page.

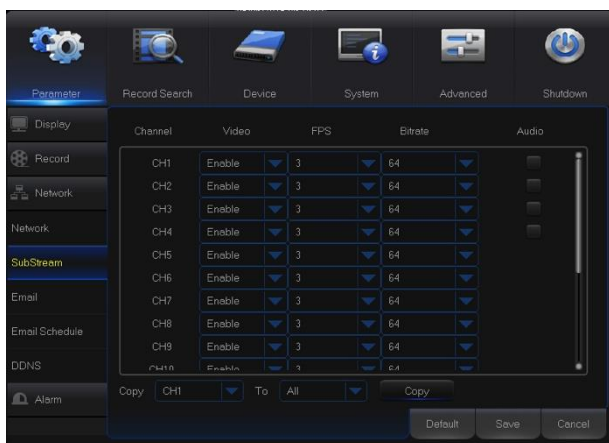


Picture 5-12

- **Video:** Sub stream switch. Select enable to preview the sub stream in the client, so as to ensure smooth playing; If Disable is selected, the client can only choose mainstream preview.
- **FPS:** FPS for network transmission. User may select value in the drop-down list.
- **Bitrate:** Bitrate for network transmission. User may select value in the drop-down list.
- **Audio:** Click and audio will play during network transmission.
- Synchronous transmission.

9. E-mail

Go to “Main Menu” → “Parameter” → “Network” → “E-mail” to enter into the menu interface.

Receive or Send IQDVR alarm Email and set parameters like Email address, SSL, Email Enable, Interval and Email Schedule. The related parameter setting should be consistent with IQDVR local setting. Refer to Picture 5-13, for help with Email please contact your System Administrator.

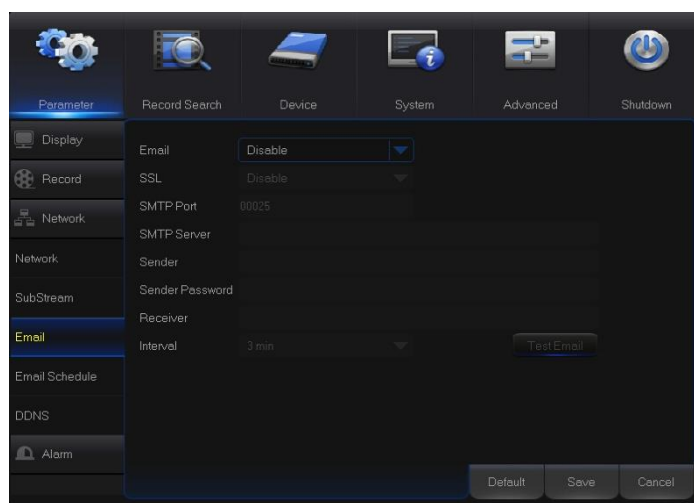

Picture 5-13

10. E-mail Schedule

Go to “Main Menu” → “Parameter” → “Network” → “E-mail Schedule” to make Email schedule, as shown in Picture 5-14.

Select the channel and the date to be set. One week’s schedule can be set.

The record schedule of the current channel can be copied to any other channel or all channels.

Note:


1. Green stands for Motion: Email will be sent in case of object motion;
2. Yellow stands for Alarm: Email will be sent in case of IO alarm;
3. Red stands for Exception: Email will be sent in case of exception, e.g. HDD full, HDD damage, Video loss, etc.



Picture 5-14

11. DDNS

Go to “Main Menu” → “Parameter” → “Network” → “DDNS” to enter into the menu interface. Set DDNS in any one of the above 3 network connection types after applying dynamic domain service. Remotely access IQDVR through domain by using browser in the form of `http://applied domain: mapped Web port number`. When using DDNS domain name to access IQDVR, user shall confirm that the port can be normally connected to current IP on the public network and the settings for server address/host name/user/password/setting should be consistent with IQDVR local setting. See Picture 5-15 below.

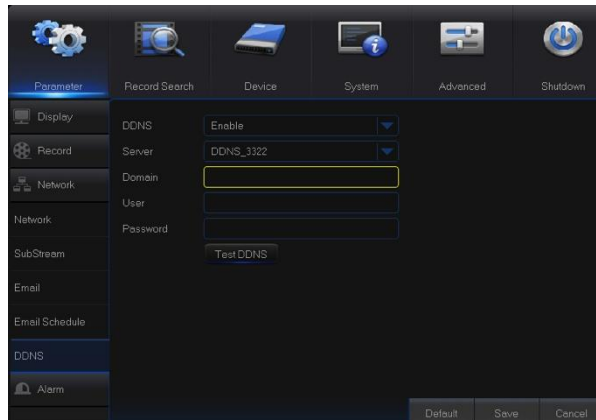


Picture 5-15

12. RTSP


Go to “Main Menu” → “Parameter” → “Network” → “RTSP”

Set User Name and Password to view video by PC software VLC (See Picture 5-16 below).

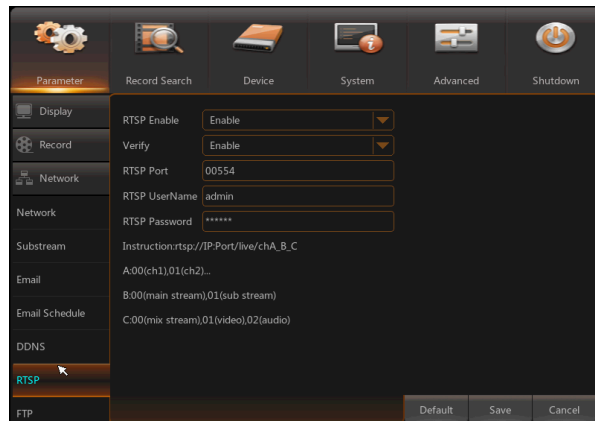

Picture 5-16

Follow the instruction to input IP and port to preview video (See Picture 5-17).

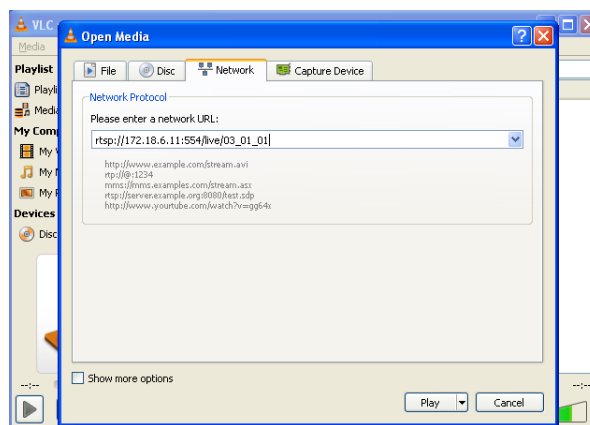


Picture 5-17


13. FTP

Go to “Main Menu” → “Parameter” → “Network” → “FTP”.

Set IP, User Name and Password to view the captured pictures in the server (See Picture 5-18). Example; Enter into <ftp://relay.anw.ru/> and input User Name and Password to view the captured pictures (See Picture 5-19), for help with FTP please contact your System Administrator.

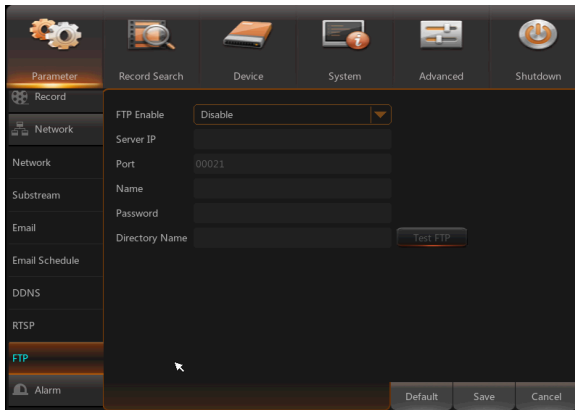


Picture 5-18

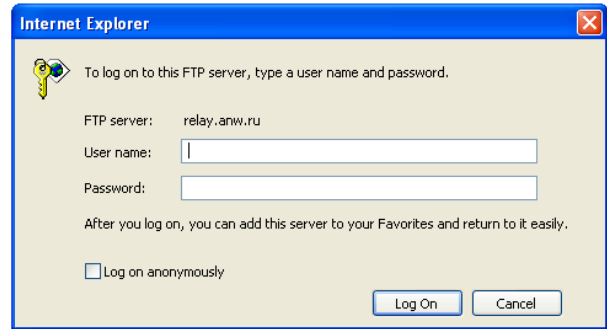


Picture 5-19

14. Motion

Go to “Main Menu” → “Parameter” → “Alarm” → “Motion” to enter into the interface shown as picture 5-20 on the following page.

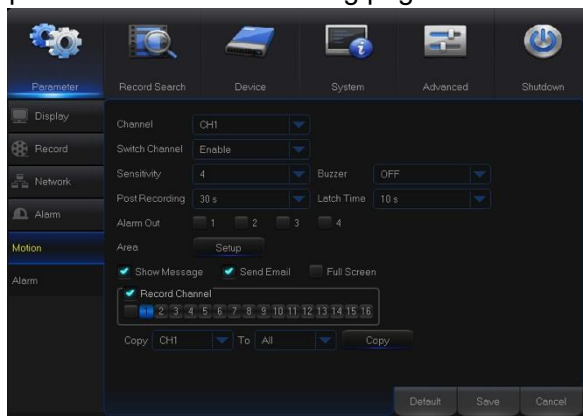

Picture 5-20

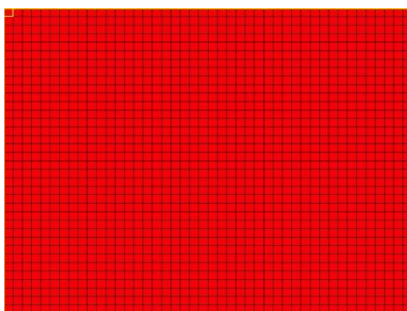

Picture 5-21

- **Channel:** Enable or disable Motion function.
- **Sensitivity:** Support 1-8 level, 8 is the highest level.
- **Buzzer:** When detecting object moving, buzzer makes alarms (disable, 10 seconds, 20 seconds, 40 seconds and 60 seconds).
- **Alarm Out:** Connect to the alarm switch of the alarm apparatus.
- **Show Message:** Messages will be displayed on the screen when moving object is detected and alarms are made.
- **Send Email:** When moving object is detected, send Email to the specified Email address.
- **Full Screen:** When moving object is detected, messages will be displayed in full screen.
- **Latch Time:** When moving object is detected, the alarm time can be set as 10 seconds, 20 seconds, 40 seconds and 60 seconds.
- **Post Recording:** After the alarm finishes, the duration time of the alarm recording can be set as 30 seconds, 1 minute, 2 minutes and 5 minutes.


- **Area:** Click it to enter into the interface shown as Picture 5-21 to set the motion detection area to be monitored intensively.

A single channel is divided into 15×12 (PAL) or 15×10 (NTSC) configurable grids. The red grids indicate that the motion detection in the area is enabled, white semitransparent ones indicates that the motion detection in the area is disabled. After setting is completed, right click the mouse button to return and click Save to make the parameter setting effective.

- **Record Channel:** When object motion is detected, the record channel setting will be activated.

15. Alarm

Go to “Main Menu” → “Alarm” → “Alarm” to enter into the interface shown as Picture 5-22.

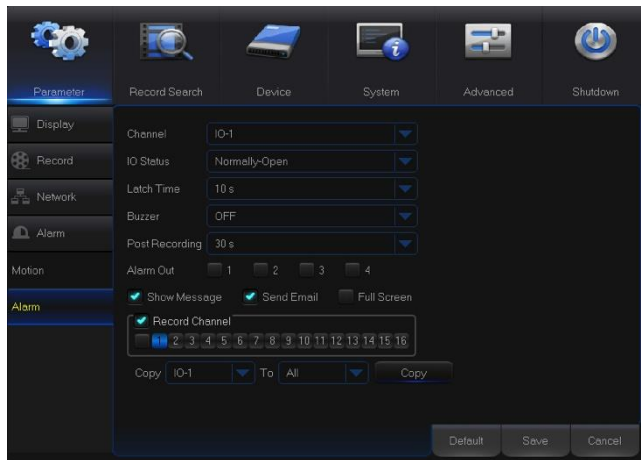

Picture 5-22

Alarm management and setting of the machine. Set alarms under different status in the interface. Please refer to Table 2-4.

- **Alarm In:** Set four groups of alarm input.
- **Alarm Type:** There are three kinds of status, i.e. Always ON, Always OFF, and OFF. Always ON: When the trigger is on, I/O alarm appears; Always OFF: When the trigger is off, I/O alarm appears; OFF: Do not receive I/O alarm from trigger.
- **Buzzer Time:** Set how long the buzzer will sound when motion is detected (off, 10s, 20s, 40s, 60s)
- **Alarm out:** Connect the external alarm switch.
- **Show Message:** Display the alarm messages on the screen when motion alarm is detected.
- **Send Email:** Set to send email to specified email when motion alarm is detected.
- **Full Screen Alarm:** When the motion is detected, the corresponding channel will be switched to the full screen mode.
- **Latch time:** Set how long the buzzer will sound when object move is detected by external sensor (10s, 20s, 40s, 60s)
- **Post Recording:** Set how long alarm record will last when alarm ends (30s, 1minutes, 2minutes, 5minutes).
- **Record Channel:** The record channel will be activated when the object move is detected.
- **Copy:** Allow you copy current channel parameters to any other channel (setting of record channel cannot be copied).


Alarm Type	Functions & Descriptions
Video Loss	When the IQDVR fails to receive video signals due to some problems (camera damage, line dropout or damage, power failure), the alarm will appear.
Motion Detection	When camera detects object moving, alarm will be activated. Sensitivity is subject to the actual application environment test. Sensitivity is adjusted according to the sensitivity of moving object detection and parameters are modified by combining the area setting .
I/O Status	Communicate with alarm device through I/O port. Alarm signals sent by IR sensor or other devices will be transformed to the system recognized signal and activate relevant channel to record or control the device output.
HDD Status	Alarm will appear when HDD does not work due to damage, power failure, HDD auto-overwrite off and insufficient space.

Table 2-1


6.2.2 Record Search

1. General

Go to “Main Menu” → “Record Search” → “Record Search” to enter into the interface shown as Picture 5-23.

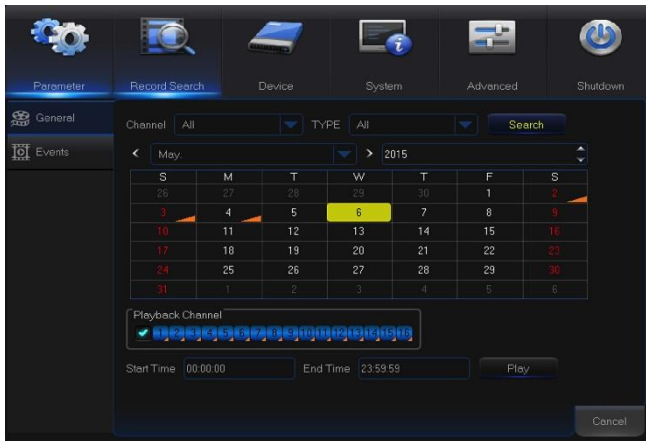

Picture 5-23

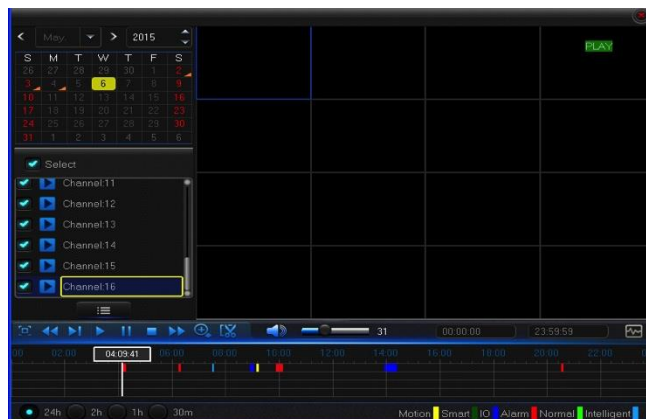


Picture 5-24


- **Channel:** Select the channel you want to search.
- **Type:** Select the type the playback record. There are two options, i.e. Normal and Alarm.
- **Start Time/End Time:** Select the specific period of time. The default setting is from 0:00 to 24:00.
- **Playback Channel:** Click a date and select corresponding channel in Playback Channel. The selected channels shall not be more than 16, as shown in Picture 5-24.
- **Playback:** Select the desired year and month and click “Search”. If there are any records, a yellow corner mark which shows the recording at specific date will appear at the down-right corner of the date sheet. Select the date checkbox and select playback channel and click Playback to enter into the interface.
- **Playback interface:** You can use the Playback Control bar to operate the Fast Forward (X2, X4, X8 and X16), Rewind (X2, X4, X8 and X16), Slow play (1/2, 1/4 and 1/8 speed), Play, Pause/Frame. You can click or drag the volume control bar to adjust volume. When playback ends, IQDVR will remain in the playback interface, as shown in Picture 5-25.

Time Axis setup, file clip and zoom in/out

- 1) The IQDVR supports the processing control bar function when playing back record files (See Picture 5-25 and 5-26)

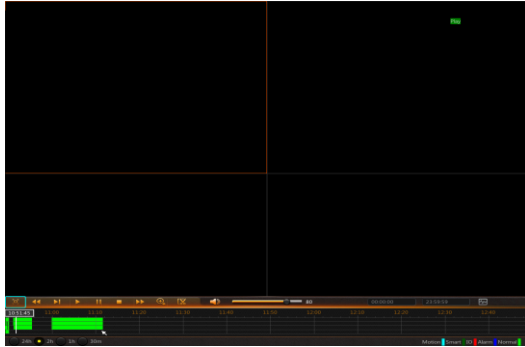

Picture 5-25

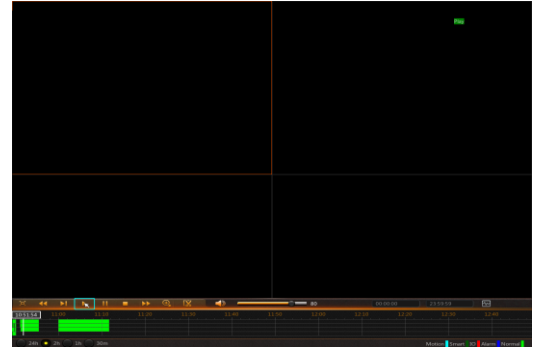


Picture 5-26

Time Axis zoom: Default value is 24hours. Allow user to select 2 hours, 1 hour, 30 minutes or user-defined.


➤ **Detailed Operation:**

Fixed time axis: If you select [**2h**] option, that means the processing control bar cover two-hour video content. The time range refers to 1 hour before and after the middle point.

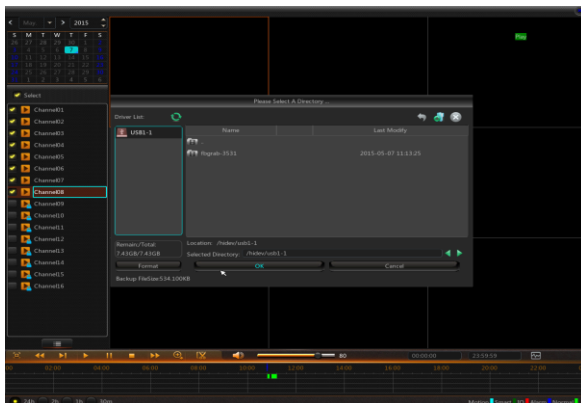

- 2) Record clip and backup function and playback zoom in/out function.

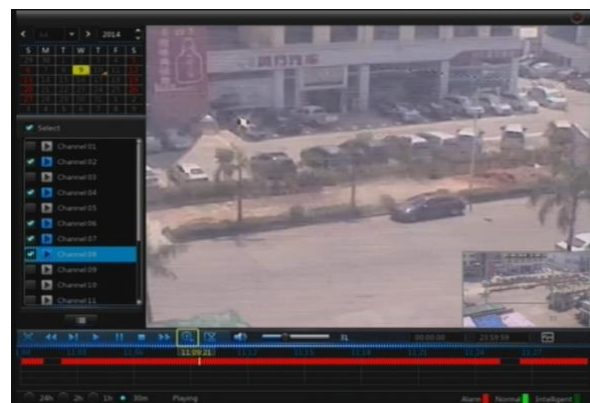

Picture 5-27




Picture 5-28


- **Clip and backup:** When it is under single channel playback, the [] icon will appear in the Play Control bar shown as Picture 5-27. Click the icon to start video clip function, click the icon again to end the function and pop up the dialog shown as Picture 5-27. Now, you may save the clipped video file.
- **Zoom out:** When it is under single channel playback, the  icon will appear in the Play Control bar. Click the icon to zoom in certain area of the playback screen and right click mouse to return the Playback page (See Picture 5-28)


2. Events


Go to “Main Menu” → “Record Search” → “Events” to enter into the interface shown as Picture 5-29. In this page, Search details by date, time, channel and record type. The relevant operations are as follows:

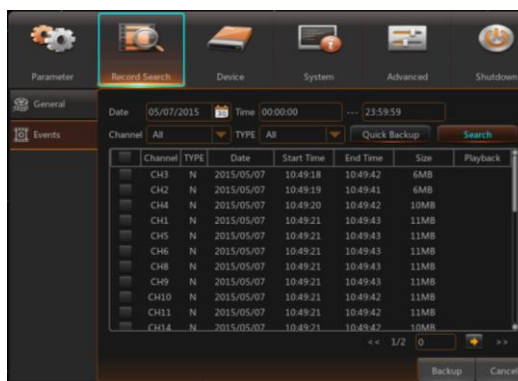

Picture 5-29


 : Previous page; Click the button to go to previous page when viewing events (except the first page). When viewing the first page, click this button to display the event list in the first page.

 : Next page; Click the button to go to next page when viewing events (except the last page). When viewing the last page, click this button to display the event list in the last page.

 : Jump; Input the desired record event page in the input box and click arrow button to jump to the input page.


Two types of backup: Quick Backup and Backup

If you want to back up a record in the detailed file list, you may tick the checkbox at the left of the record (“√” means it has been selected) and click “Backup” to enter into “Select backup type” (Make sure USB disk or other portable storage device are connected), as shown in Picture 5-30.

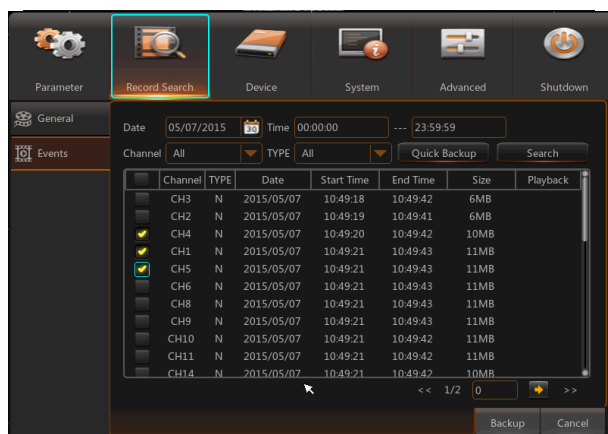

Picture 5-30

If you want to back up with USB, select USB and click OK to start processing and you may see the backup progress shown as Picture 5-30.

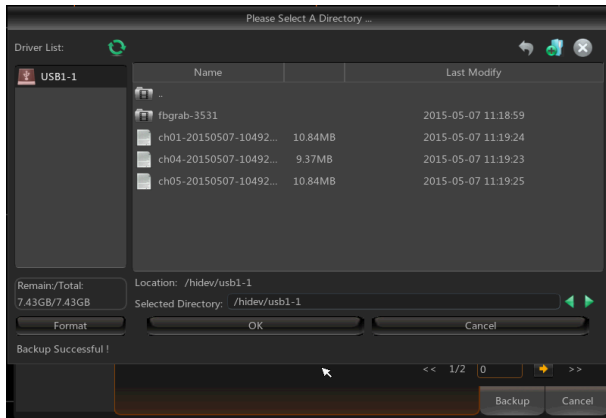

Picture 5-31


After backup finishes, message Backup Finishes will appear at down-right corner, as shown in Picture 5-31.

Note: Before backup, connect devices for backup (USB flash disk or other mobile storage devices with USB interface)


3. Play Backup Files

1.Copy backup files to the computer.



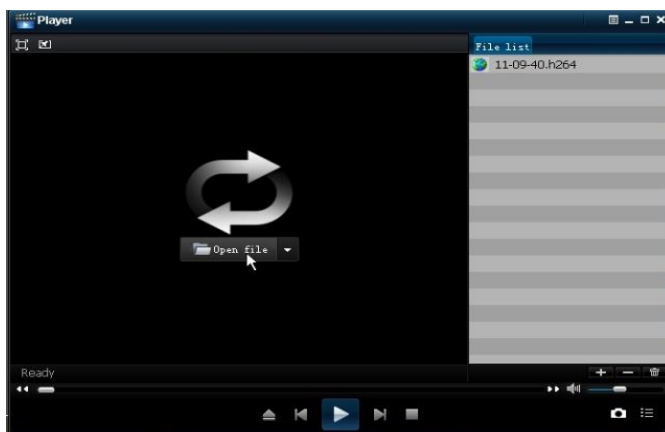

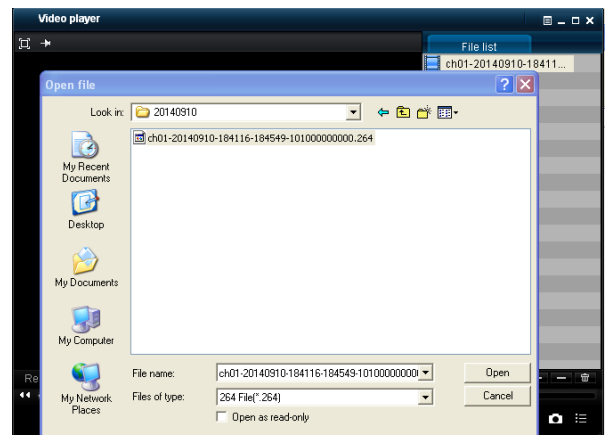


2.Open playback player and click “+” or “Open file”. For example, if you want to choose *.264, add backup file and select a file to play, as shown in Picture 5-32 and 5-33.




Picture 5-32





Picture 5-33


- : Play: Click to play file
- : Pause: Click to pause.
- : Stop: Click to stop playback.
- : Next: Click to play next file.
- : Previous: Click to play previous file
- : Slow Playing: click to play at 1/2, 1/4, 1/8, 1/16 speed.
- : Fast Playing: click to play at 2x, 4x, 8x, 16x speed.


: Open file

: Full screen display

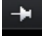
: Never on top


: Always on top


: On top during playing

: Screenshot: Save path: installation directory\Video Client\Capture


: Adjust volume


: Add folder or file.

: Delete file in the list.

: Delete all files in the list.

: Expand/pack up the list.

: Advanced configuration: Set the save path for the captured pictures and set the display language of player, as shown in picture 5-34 below.

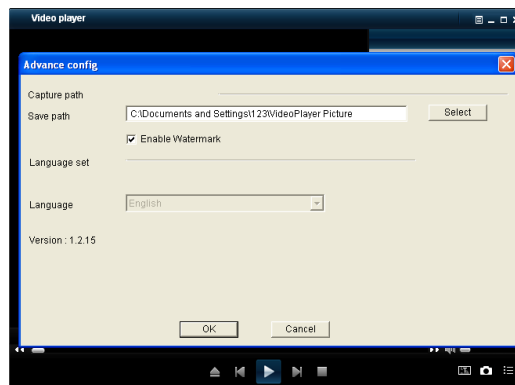


Picture 5-34


6.2.3 Device

1. HDD

Go to “Main Menu” → “Device” → “HDD” to enter into the interface shown as Picture 5-35.

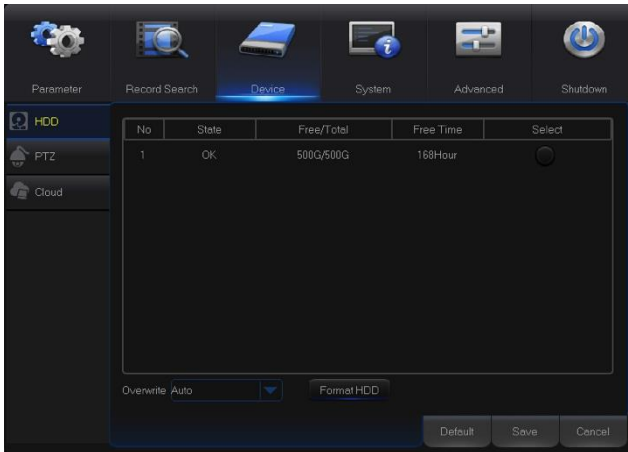

Picture 5-35

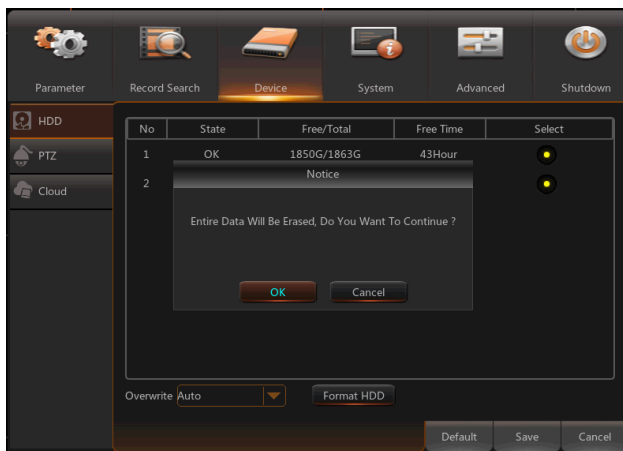

Picture 5-36

When HDD is connected, the system will automatically detect if HDD is normal or not; if HDD needs to be formatted, status will be shown as “Not formatted”. Select the HDD and format the HDD. If the system detects HDD is normal state, the HDD status will be shown as “Normal”. See Picture 5-36


- **No.:** Number of HDD connected to system.
- **Status:** Shows the current status of HDD. It will be available only when HDD is “Normal”.
- **Free/Total Space:** Remaining or total space of HDD
- **Free Time:** Remaining time for HDD recording according to currently set “Resolution”, “Encoding Rate” and “Frame Rate” of image.
- **Auto-overwrite:** When set to ENABLE, the IQDVR will overwrite the oldest files on the hard drive if hard drive space is full. When set to DISABLE, the IQDVR will stop recording if hard drive space is full. Overwrite time: 1 day, 3 days, 7 days, 14 days, 30 days and 90 days. It means the longest storage time of records in HDD. If the time is over, the records will be deleted. For example, if the time is set as 3 hours and the data in HDD include 12, 13, 14, 15, 16, 17, 18, 19 and 20 o'clock, then data 18, 19 and 20 will be saved and data 12, 13, 14, 15, 16 and 17 will be deleted.
- **Format HDD:** Format HDD for the first use.

Note: Recording can only be performed when HDD is in “Normal” state.

6.2.4 PTZ and Cloud Storage

1. PTZ

Go to “Main Menu” → “Device” → “PTZ” to enter into the interface shown as Picture 5-37 below

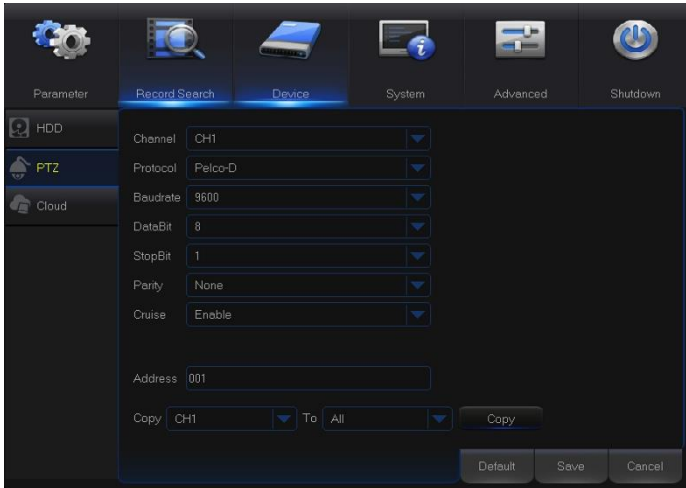

Picture 5-37


Select a PTZ channel and set PTZ protocol (Pelco-D, Pelco-P), Baud rate (1200, 2400, 4800, 9600), Data Bit (8, 7, 6, 5), Stop Bit (1, 2), Parity (None, Odd, Even Mark Space), Address and Cruise.

Parameter setting for above channels must be the same as that of PTZ so that PTZ can be controlled. The protocol, baud rate and PTZ address must be set.


2. Cloud Storage

Cloud: Cloud Space (Network HDD). Upload the IQDVR periodically captured pictures and motion detection captured pictures to Dropbox.

- 1) Register in Dropbox website, Address: <https://www.dropbox.com/>
- 2) Configure network to ensure the normal operation of IQDVR network.
- 3) Configure Cloud: Enable Cloud and set the channel and interval for IQDVR periodically captured pictures; Enable Motion Detection to get captured pictures for motion detection.
- 4) DriveName refers to the name created in the folder of Dropbox and the name can be defined by the user, e.g. CloudDVR000. The folder is to store the IQDVR periodically captured pictures (See Picture 5-38).
- 5) Click [Advanced E-mail Setup] to set the Email box. User shall input his Email. (See Picture 5-39)

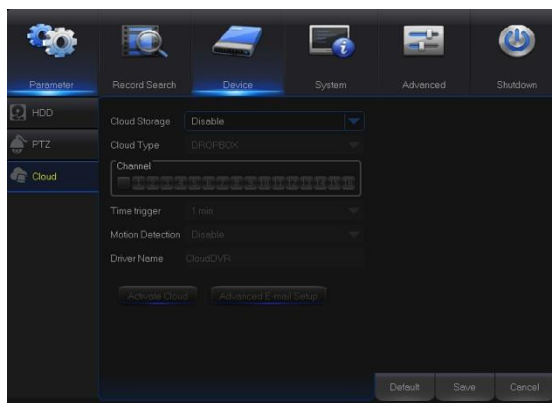

Picture 5-38

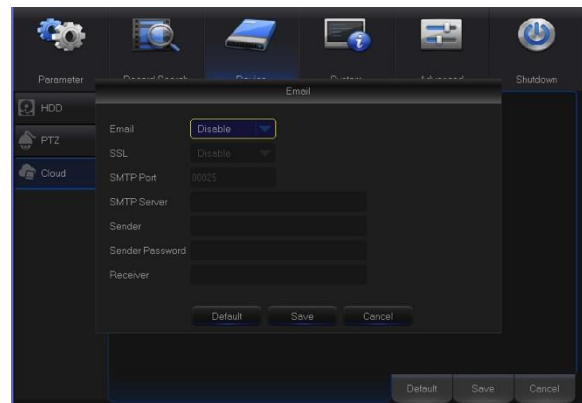


Picture 5-39

- 6) Click [Active Cloud] to activate Cloud and Email will receive the URL related to Cloud
Input the registered user name to visit the above website and the following interface will pop up.
- 7) Click the icon at the upper-left to view the folder (CloudDVR000) made in the 4th step.
- 8) Enter the folder to view the IQDVR captured pictures.

6.2.5 System

1. General

Go to “Main Menu” → “System” → “General” → “General” to enter into the interface shown as Picture 5-40.

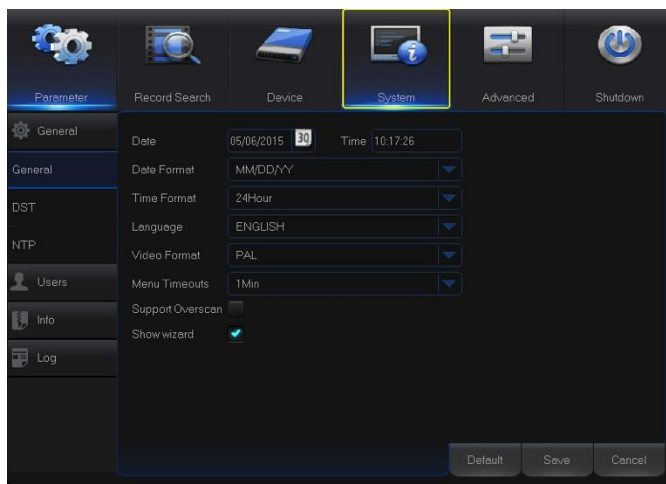


Set Date, Time, Date Format, Time Format, Language, Video Format, Menu Timeouts and Show Wizard in this page.

Picture 5-40

2. DST

Go to “Main Menu” → “System” → “General” → “DST” to enter into the interface shown as Picture 5-41.

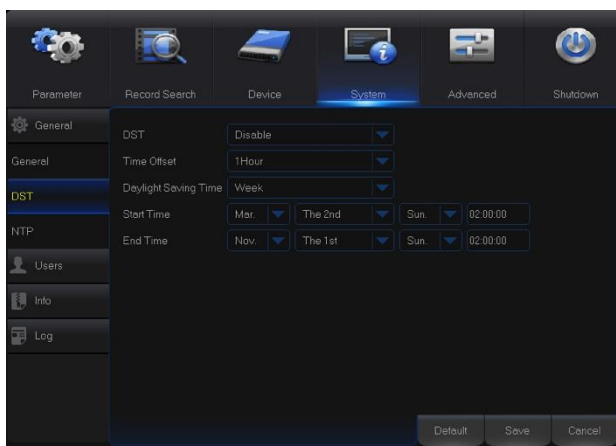


Enter into the interface shown as Picture 5-41 to set DST, Time Offset, Start Time and End Time.

Picture 5-41

3. NTP

Go to “Main Menu” → “System” → “General” → “NTP” to enter into the interface shown as Picture 5-42.

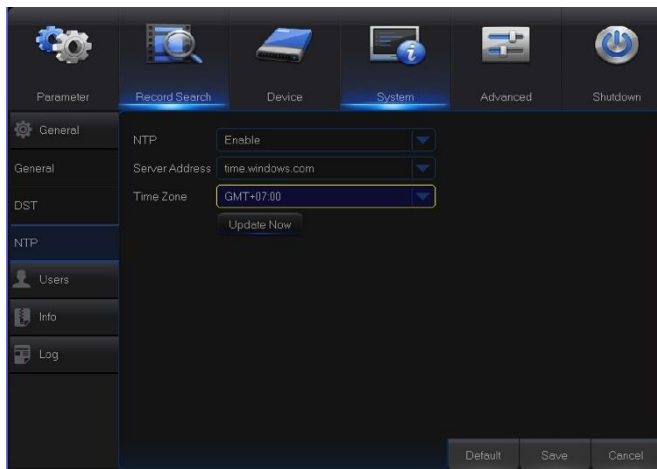


Picture 5-42

- **NTP service:** Enable/Disable NTP function.
- **Server Address:** Select NTP server (time.windows.com,time.nist.gov, pool.ntp.org).
- **Time Zone:** Corresponding time zones for various nations or regions.
- **Update Time:** Enable NTP function and save parameters and click Update Time to calibrate the system time.
Note: When NTP function is set to “Enable”, system will calibrate the system time at every 00:07:50 and every start-up.

4. Users

Go to “Main Menu” → “System” → “Users” to enter into the User interface shown as Picture 5-43.

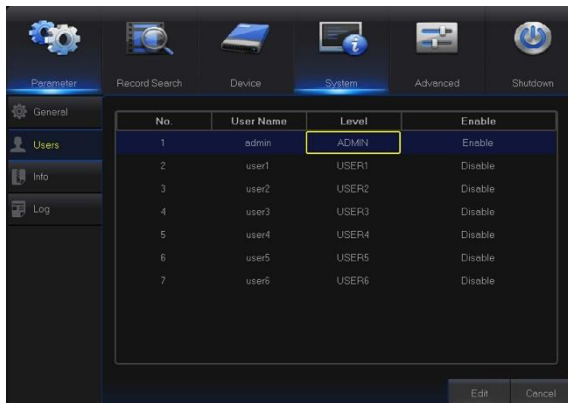


Picture 5-43

Supports up to seven users, including one administrator and six users. Click [Edit] button to enter into the [User Edit] interface to input user name and password, as shown in Picture 5-43

User Name consists of 8 characters and password is composed by number 0-9 with max length of 8 numbers

Set user password. Administer is authorized to set user common user’s authority, as shown in Picture 5-44

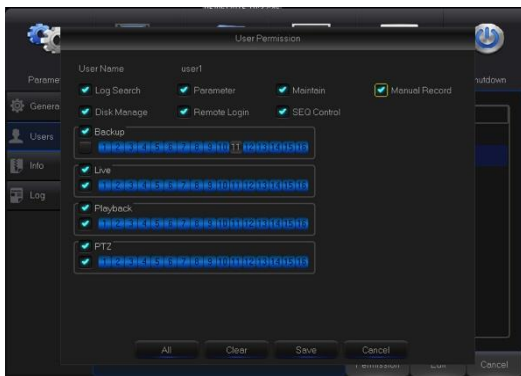


Picture 5-44

- **Log Search:** Check all the system logs.
- **Parameter:** Set all the parameters.
- **Maintain:** Update version, recover ex-factory value, device reboot and shut down.
- **Disk Management:** Manage and control the HDD and USB drive.
- **Remote Login:** Remotely login IQDVR.
- **SEQ Control:** Sequence live screens for all the channels.
- **Manual Record:** Manually start/stop record.
- **Backup:** Tick-select the ENABLE “√” option and select channel for backup, the user is allowed to back up the record in the selected channel.
- **Live:** Tick-select the ENABLE “√” option and select a channel and the user is allowed to view all the live images in the selected channel.
- **Playback:** Tick-select the ENABLE “√” option of Playback and the common user is allowed to playback the selected record in the channel.

5. User Edit


Enable or disable the function or set password (See Picture 5-45).

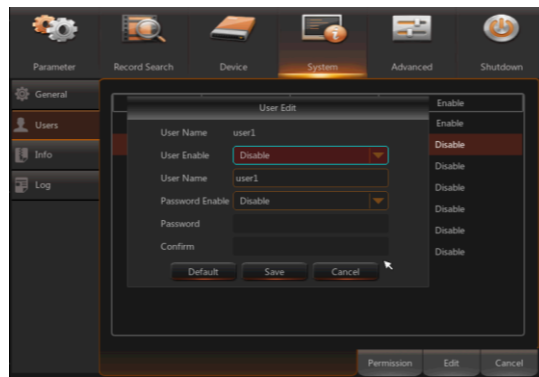

Picture 5-45

6. Info


Go to “Main Menu” → “System” → “Info” to enter into the interface shown as Picture 5-46.

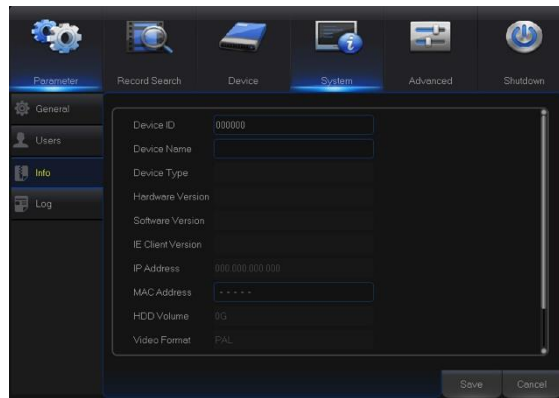

Picture 5-46

7. Log

Go to “Main Menu” → “System” → “Log”, as shown in Picture 5-47.

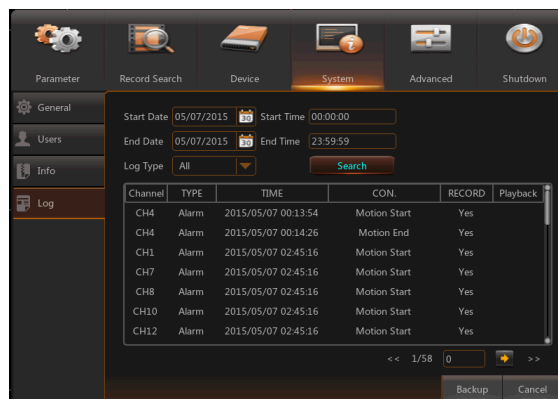


Picture 5-47

Search log information in different period of time. Click “Backup” to save all the log information, as shown in Picture 5-47 above.

6.2.6 Advanced

1. Maintain

Go to “Main Menu” → “Advanced” → “Maintain” to enter into the interface shown as Picture 5-48.

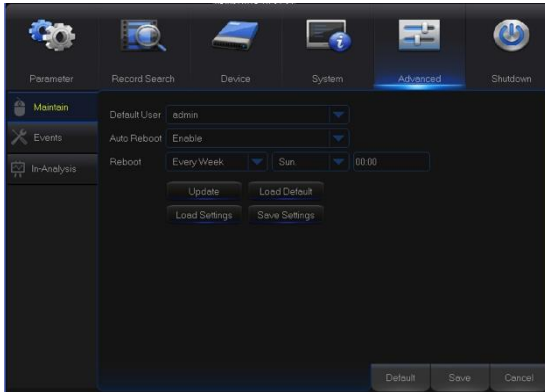

Picture 5-48


- **Auto Reboot:** Enable the auto maintenance function to reboot system regularly at every day/week/month. When Auto Reboot is enabled, IQDVR should be in the main interface and no user operation.
- **Update:** Click Update to enter the Device interface and select the updating file in USB to execute.

- **Load Default:** If [Load Default] is selected, you can initialize the system to the ex-factory default. Click “Load Default” and select items to be restored
- **Load Settings:** Load parameters on the removable storage device to the IQDVR.
- **Save Settings:** Save the set parameters of user’s IQDVR to the removable storage device.

Note: Do not take out the USB memory or cut off the power during upgrading. When the update is done, system will be automatically restarted. After about 5 minutes, the upgrading will be finished. It is recommended to **load ex-factory default** after upgrading. The auto maintain function can be effective only when IQDVR returns back to Preview mode with no any operation within the set auto maintain time.

2. Events

Go to “Main Menu” → “Advance” → “Events” to enter into the interface shown as Picture 5-49.

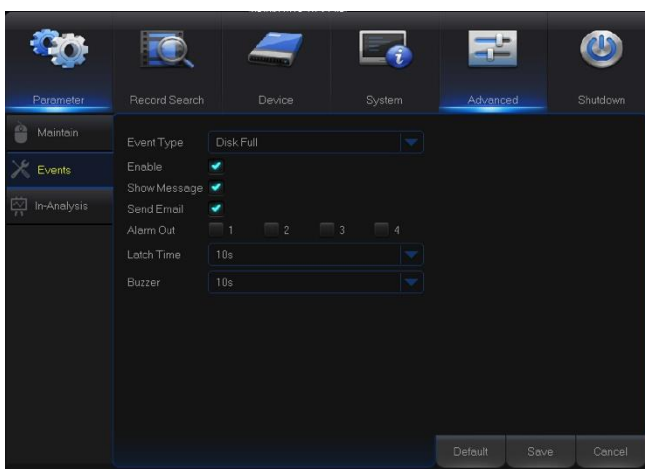


Picture 5-49

- **Event Type:** Supports three abnormal types: Disk Full, Disk Error and Video Loss.
- **Enable:** Active alarms for abnormal situations.
- **Alarm Out:** Enable or disable alarms
- **Latch Time:** How long the buzzer will sound when external sensor alarm is detected (10s, 20s, 40s, and 60s).
- **Show Message:** Set show message on the screen when sensor alarm is detected.
- **Buzzer:** How long the buzzer will sound (10s, 20s, 40s, and 60s).
- **Send Email:** Select to send Email to specified Email address when abnormal events appear.

6.2.7 Shutdown


- Go to “Main Menu” → “Shutdown” to enter into the interface shown as Picture 5-50.

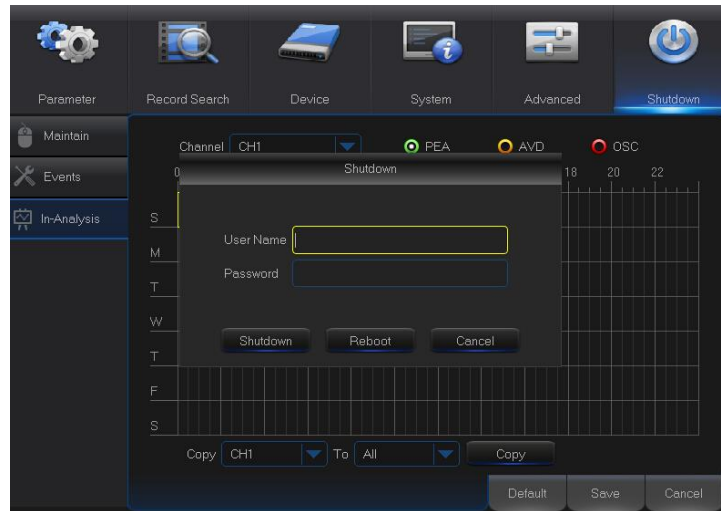


Picture 5-50

6.3 Menu Lock



In consideration of system safety, click the icon  on the toolbar when the end user leaves away from IQDVR and the system interface will be locked. User has to input Device ID, User Name and Password on the login interface to unlock (**Default: User Name: admin, Password: blank**). The login interface is as shown in Picture 5-51.

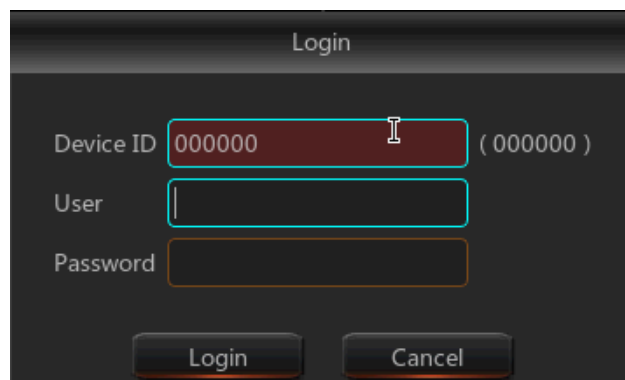

Picture 5-51


Note: Administrator has all authorization of menu operation and users have limitations for authorization and have to get authorization from administrator.

6.4 Split Mode

There are many display modes in video channel, including single channel display, SEQ display and split mode.


6.5 Record Search



Click  icon on the toolbar to enter into the Record Search interface to search and playback. Refer to former section for specific operating method.


6.6 Mute



Click  icon on the toolbar or Mute button on the panel or remote controller to control the mute of IQDVR.

6.7 Start Sequence



After set channel sequence time, click Start Sequence icon  on the toolbar to start sequence.


Chapter 7 Web Application Manager

7.1 ActiveX control download and installation


Open your web browser and input the IP address of the IQDVR, such as: <http://192.168.1.168> . Your PC will download and install “ActiveX” plug-in automatically. If your computer system is Windows Vista or Windows 7/8, you may need to setup the user authority for remote control, or you may not be able to backup or record.

Vista System: Start → Setup → Control Panel. Set user authority in control panel (as shown in picture below). Remove the Tick “√” in front of the option “Use UAC to help protect your computer” and confirm OK.

WIN7:

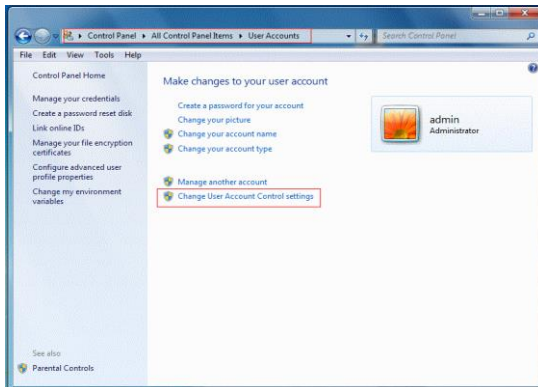

WIN7-1

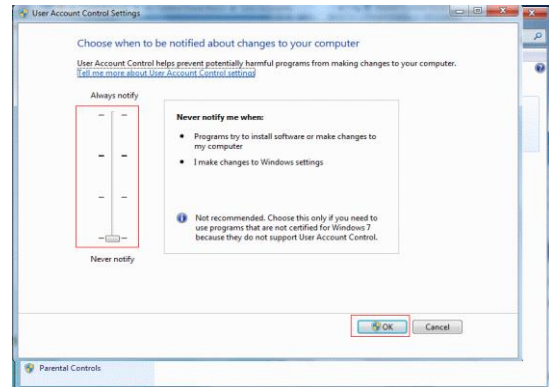


WIN7-2


Note: If the ActiveX control is not downloaded successfully, please check if your browser's safety level or firewall setting is set too high. Please open IE browser → [Menu Bar]Tools → Internet options → Security → Internet → Custom Level → Enable the options (Refer to the Picture 6-1-1 and Picture 6-1-2).

If the web application runs for the first time, please wait for about one minute to finish downloading.

If you want to use the undated ActiveX control at a computer which you have already logged in before, please delete the original control and click [Start → Run] and then input the command characters: "regsvr32/u HiDvrOcx.ocx". Press OK. When you log in at the next time, new ActiveX control will be automatically downloaded. Please wait.

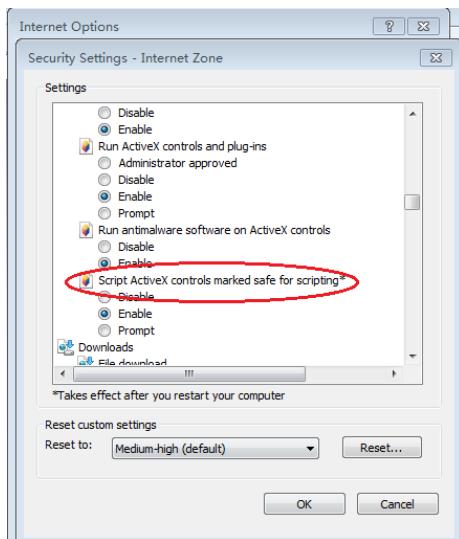


Picture 6-1-1

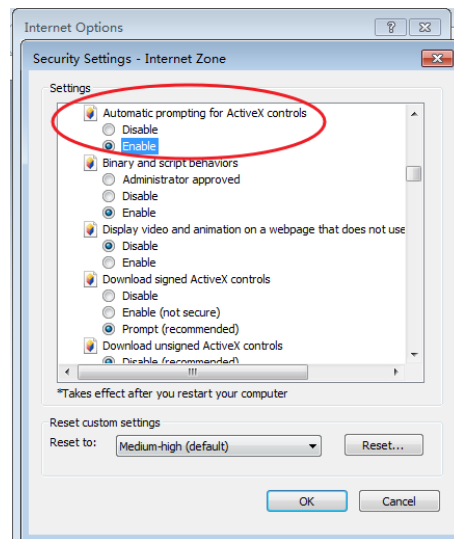

Picture 6-1-2

7.2 Web Application Manager Login

After ActiveX controls installation, please input user name and password, select Main Stream or Sub Stream (In general, select main stream for intranet and sub stream for outer net), and input web port number and select language in the interface (See picture 6-2). There is an option for opening all channel preview, select it to open all live pictures. Press Login to log in client and remotely visit IQDVR. The default password is blank and administrator is authorized to modify the password. Set password as per introductions of user management in system setting.

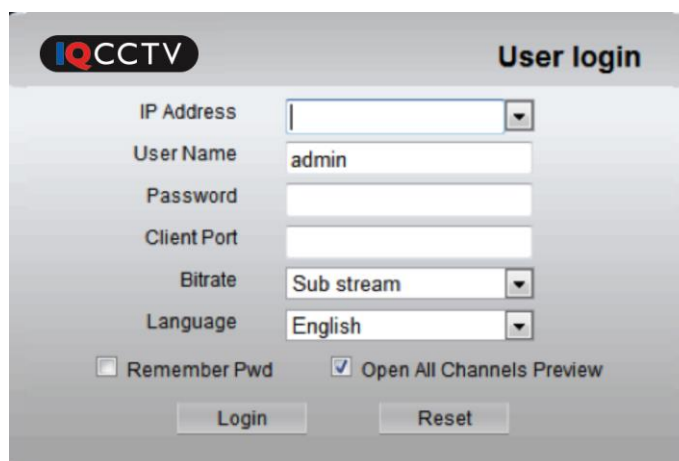


The screenshot shows the 'User login' window for IQCCTV. It features a grey header with the 'IQCCTV' logo on the left and the title 'User login' on the right. Below the header, there are several input fields and dropdown menus: 'IP Address' (a dropdown menu), 'User Name' (a text box containing 'admin'), 'Password' (an empty text box), 'Client Port' (an empty text box), 'Bitrate' (a dropdown menu set to 'Sub stream'), and 'Language' (a dropdown menu set to 'English'). At the bottom, there are two checkboxes: 'Remember Pwd' (unchecked) and 'Open All Channels Preview' (checked). Below the checkboxes are two buttons: 'Login' and 'Reset'.

Picture 6-2

After you have logged in, you will see the real-time monitoring interface and connect video automatically, as shown in Picture 6-2.

7.3 Live Interface

Log in and enter into the live interface, as shown in Picture 6-3.

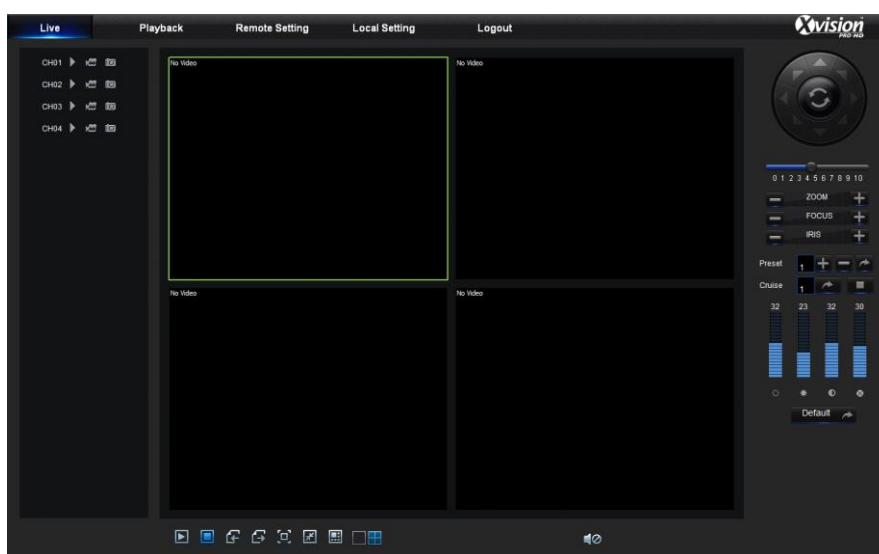

7.3.1 Menu Bar

Menu Bar: Live, Replay, Configuration, Local Setting and Logout.

1. Live Display

Log in the Web Application Manager, system will be defaulted to enter into <Live> interface shown as Picture 6-3. You can click [Play] button to Open/close live images, on-spot record, capture, and many live display modes.

Buttons on a single live interface:



: Volume switch



: Record switch: the remote record switch of client. Record will be automatically saved to a specified position on PC after the function is enabled.



 
: Snapshot: Capture the selected live image and save it to a specified location on the PC.

The image is saved as *.bmp format.



: Open or close the images on live window.

Or **click the right key of mouse on each <Live> window** to pop up channel operation menu as shown in Picture 6-4



Picture 6-4

Show bit rate: Tick Show Bit rate to show bit rate in current window.



: Switch display mode in channel window



: Open all the live channels.



: Close all the live channels



: Display previous group of channels




: Display next group of channels





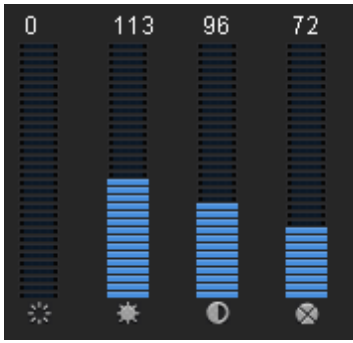

: Click to maximize the current window to full screen. Right click to pop up menu option and select Exit Full Screen.


2. Video Control




Picture 6-5

- : Adjust the chromaticity of video
- : Adjust the brightness of video
- : Adjust the contrast of video
- : Adjust the saturation of video

7.3.2 Playback

Click  to enter into Playback interface to remotely view the records on the IQDVR HDD, as shown in Picture 6-6.

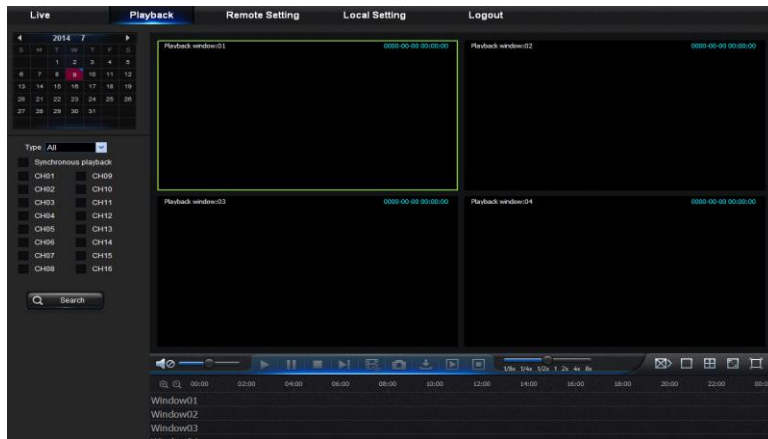


Picture 6-6

It supports 1 to 4 channel record playback.

1. Record Search


Record playback procedure


Firstly, select the date you want to check and tick 1 to 4 channels. Any record files in current channel at current date will be displayed in the status bar of the interface. (See Picture 6-7).

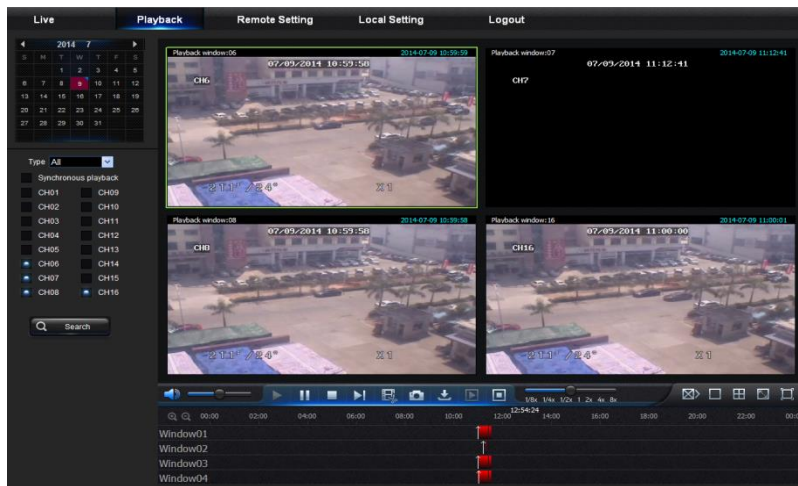


Picture 6-7

 Secondly, select record type (Normal record, Alarm record and All) and channels, and then click



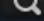
“ Search”, and time axis panel will display specific time quantum, as shown in Picture 6-8.


On the time axis, red part stands for alarm record, yellow stands for normal record and original part stands for no record during this period.

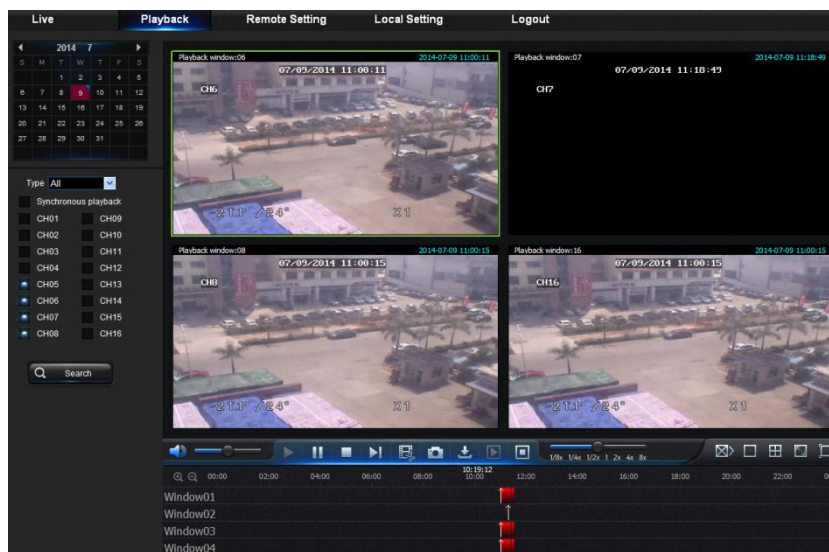



Picture 6-8

Before playback, choose to enable playback 4 channels synchronously. If you tick-select “ Synchronous playback”, that means the selected channel will playback synchronously; otherwise, you could separately control the channels playback.

Thirdly, start playback

Click  to start record playback. When mouse cursor is moving on the time axis, the time point of current position will be displayed on the time axis screen. Click to locate the record. Click the

icon  or  to zoom in/out the time bar display ratio, as shown in Picture 6-8.

2. Playback Control

Playback control bar, as shown in picture 6-9.



Picture 6-9

Please see below for a detailed description:

Key	Description	Key	Description
	Play		Enable the volume switch
	Pause		Volume adjustment bar
	Stop		Slow playing 1/2, 1/4, 1/8, Fast playing 1/2/4/8
	By frame		Stop playing all the files
	Record Clip		Single channel mode
	Snap		Quad mode
	Download		Full Screen
	Open all the playback channels		Stop playing all the playback


Table 6-1

Record file clip

After opening playback, click icon to clip the selected file; and click again to stop the clip function. Then playback clip is successfully done. Record clip file will be saved as *.264 format.

Snapshot function



Move the mouse curse to the channel you want to capture, and click [] icon to capture the live images remotely. After capturing the images successfully, a path prompt box will be popped up, as shown in Picture 6-10.

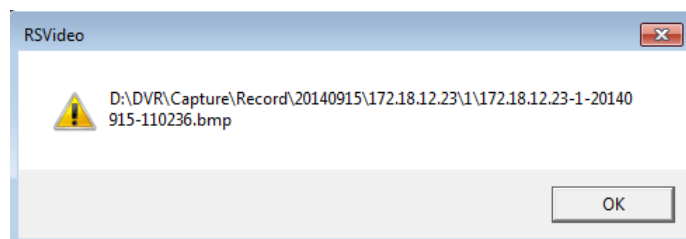

Picture 6-10

The captured file will be saved as .bmp format.

Record file download

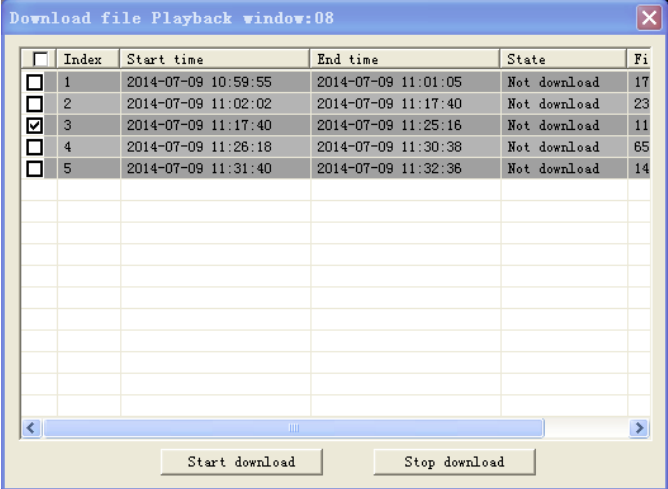Click download icon “


<input type="checkbox"/>	Index	Start time	End time	State	Fi
<input type="checkbox"/>	1	2014-07-09 10:59:55	2014-07-09 11:01:05	Not download	17
<input type="checkbox"/>	2	2014-07-09 11:02:02	2014-07-09 11:17:40	Not download	23
<input checked="" type="checkbox"/>	3	2014-07-09 11:17:40	2014-07-09 11:25:16	Not download	11
<input type="checkbox"/>	4	2014-07-09 11:26:18	2014-07-09 11:30:38	Not download	65
<input type="checkbox"/>	5	2014-07-09 11:31:40	2014-07-09 11:32:36	Not download	14

Picture 6-11

Tick-select the record file you want to download and click [Start download]. System will download the record file in sequence and save to local PC. The downloading file will be displayed in percentage form. After downloading finishes, “Complete” will be displayed on the status bar.

7.3.3 Remote Setting

Click Remote Setting to enter into the interface shown as Picture 6-12, including Display, Record, Network, Alarm, Device, System and Advance.

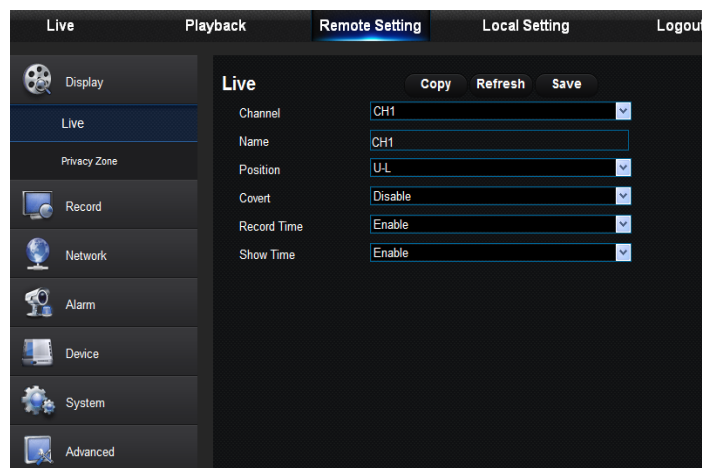


Picture 6-12

1. Display


Unfold [Display] option to find its sub-options: Live and Privacy zone.

1) Live: You may change channel name, position, channel preview and relevant parameters. If show time is set as <disable>, current IQDVR system time will not appear on the screen on live mode. (See Picture 6-13).

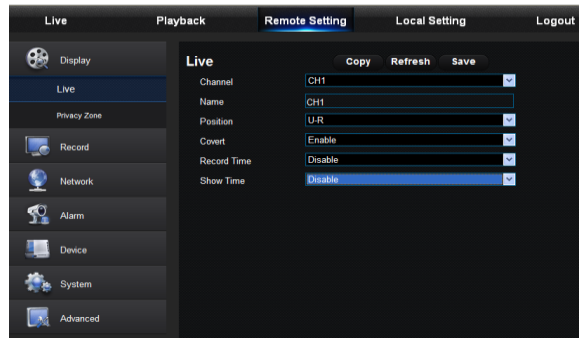

Picture 6-13

2) Privacy Zone: Each channel can set 4 privacy zones, as shown in Picture 6-14. The relevant parameters should be consistent with IQDVR local setting. Select zones to be deleted and click "Delete" and click "Save" at up-right corner.

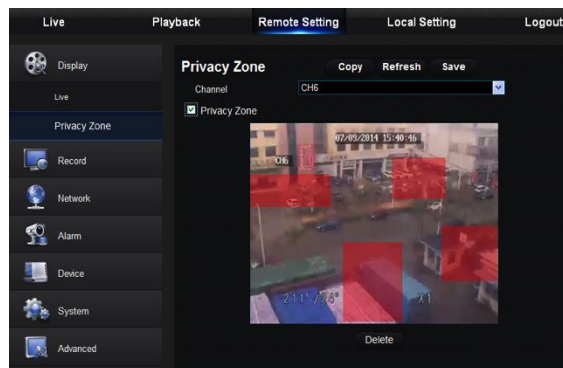

Picture 6-14

2. Record


Click <Record> option to unfold its sub-options: Record parameter and Schedule.

1) Record Parameters. The parameters should be consistent with IQDVR local setting, as shown in Picture 6-15.



Picture 6-15


- 3) Record Schedule. The parameters should be consistent with IQDVR local setting, as shown in Picture 6-16.

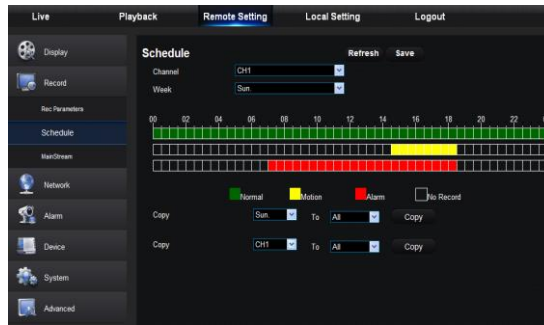

Picture 6-16

Green stands for Normal record; Yellow stands for Motion detection; Red stands for I/O trigger record.

- 4) Mainstream: User may set Mainstream, as shown in Picture 6-17. The relevant parameters should be consistent with IQDVR local setting.

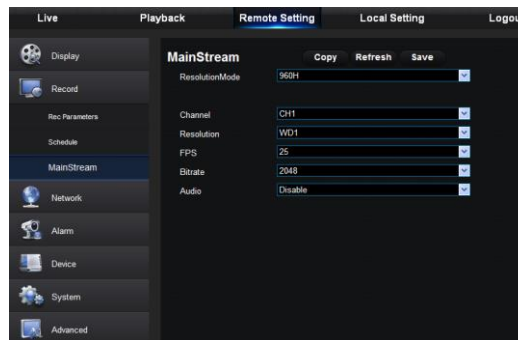


Picture 6-17

7.3.4 Network

Unfold <Network> to show its sub-options: Network, Email, and DDNS configuration, as shown in Picture 6-18.

1. LAN setting


IQDVR supports Static/DHCP/PPPOE modes. System default network type is <Static>. User can set parameters as required. After the network parameters are modified successfully, IQDVR will automatically restart to make the setting effective.

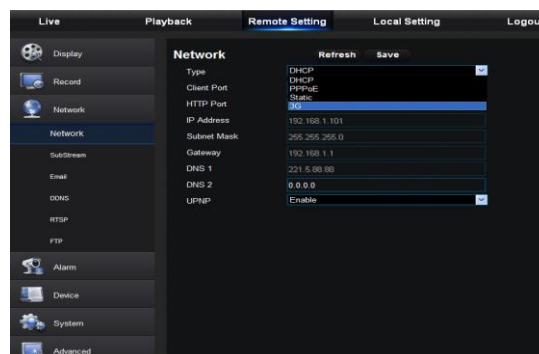

Picture 6-18

2. Sub stream


Set Mainstream, as shown in Picture 6-19. The relevant parameters should be consistent with IQDVR local setting.

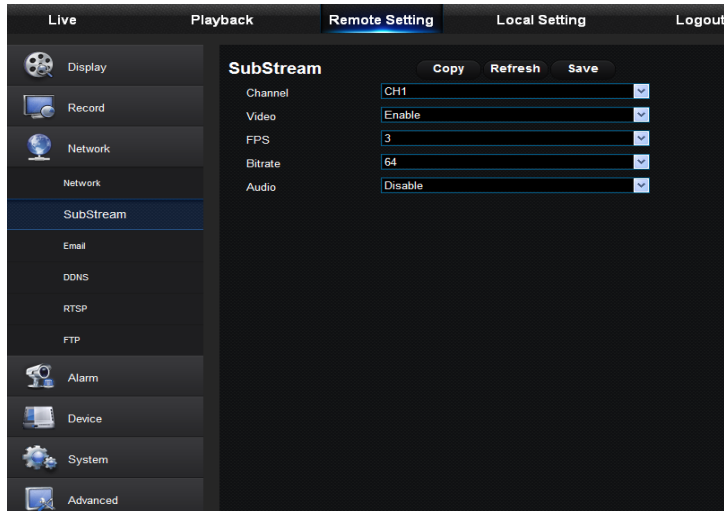

Picture 6-19

3. Email


Email: Set IQDVR alarm Email configuration parameters, including Email address, SSL, Email Enable, Interval and Email Schedule, etc. Detailed parameters should be consistent with IQDVR local setting. Refer to Picture 6-20.

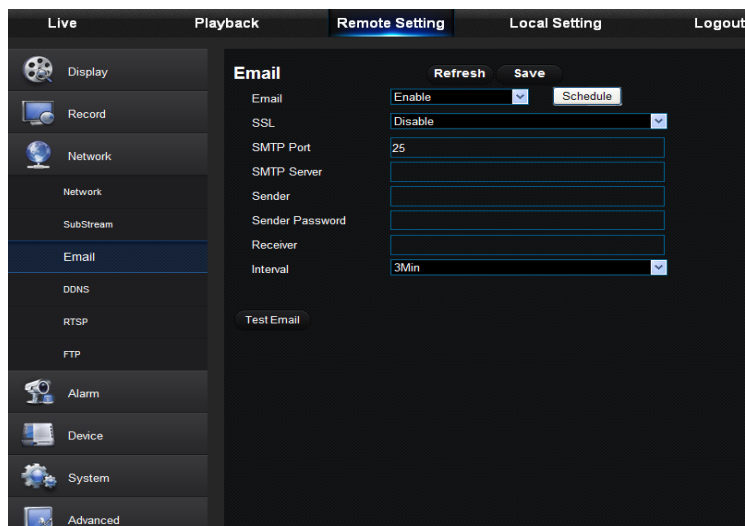

Picture 6-20

4. DDNS


DDNS: After user applies for DDNS service, you could enable <DDNS> function under any one network type mode (Static, DHCP and PPPoe). And you may remotely visit the IQDVR through domain name (http://domain name: Web port Number.). When visiting IQDVR by using DDNS, user should make sure port and current IP can be normally connected in public network. Details settings, including server address, host, user, and password, should be consistent with IQDVR local setting. Please refer to Picture 6-21.

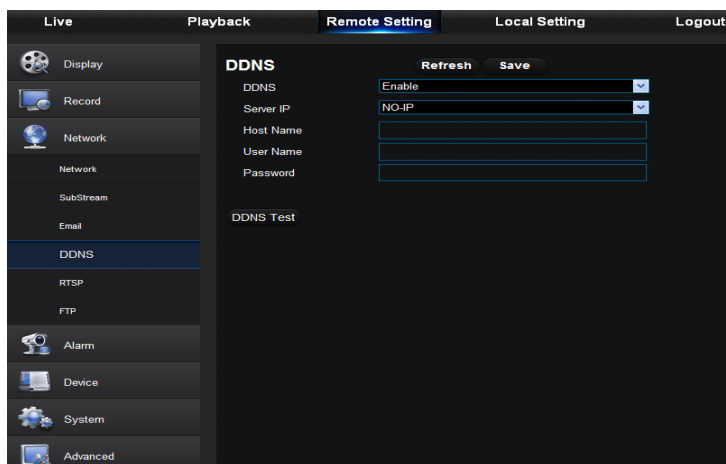

Picture 6-21

5. RTSP


Refer to Picture 6-22. The relevant parameters should be consistent with IQDVR local setting.

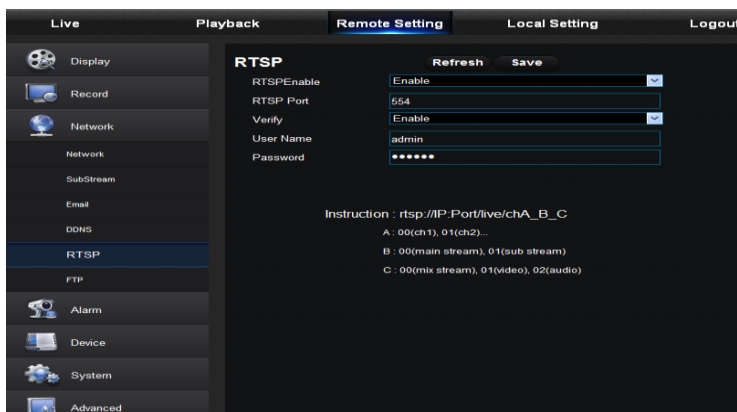

Picture 6-22

6. FTP

Refer to Picture 6-23. The relevant parameters should be consistent with IQDVR local setting.

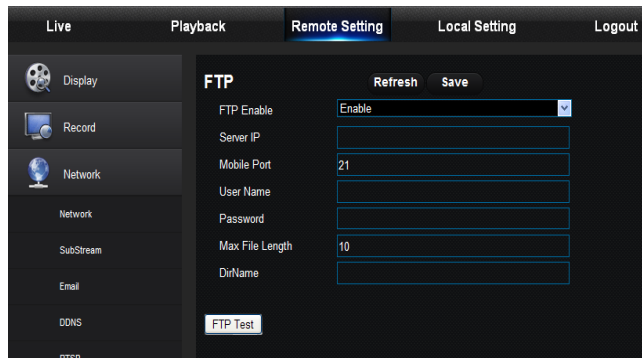


Picture 6-23

7.3.5 Alarm

Alarm setting includes Motion Detection and I/O Alarm Parameters.

1. Motion Detection


Configure Sensitivity, Alarm out, Alarm Record and Alarm Capture, etc. Detailed setting should be consistent with IQDVR local setting (See Picture 6-24).

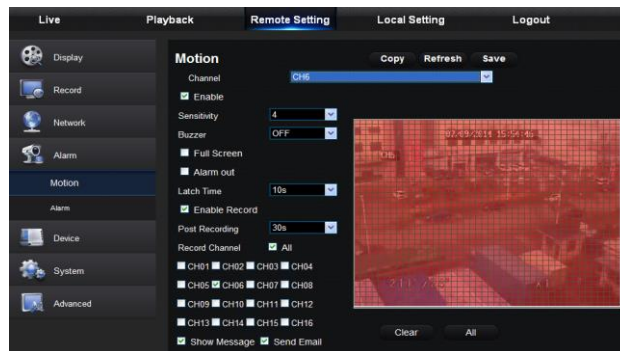

Picture 6-24

2. I/O Alarm (Only supported on IQR1080D8 and IQR1080D16)

Set parameters for I/O Alarm, Alarm Out, Alarm Record, Send Email, etc. Detailed setting should be consistent with IQDVR local setting (See Picture 6-25). Only supported on IQR1080D8 and IQR1080D16.

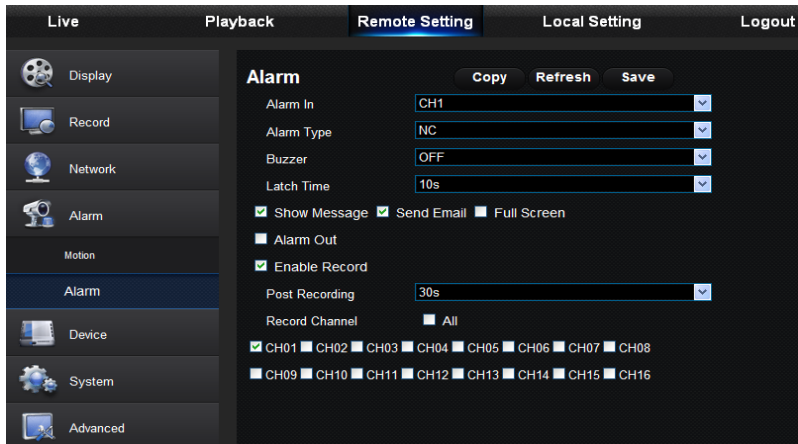


Picture 6-25

7.3.6 Device

Click <Device> to unfold its sub-options: HDD and PTZ.

1. HDD


Check HDD status of IQDVR and overwritten time. Detail setting should be consistent with IQDVR local setting. Please refer to Picture 6-26.

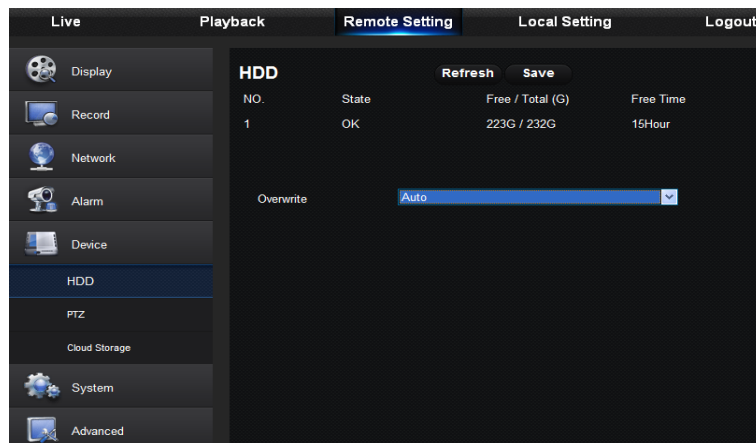

Picture 6-26

2. PTZ


Set the relevant parameters of PTZ. Detail setting should be consistent with DVR local setting. Please refer to Picture 6-27. IQDVR

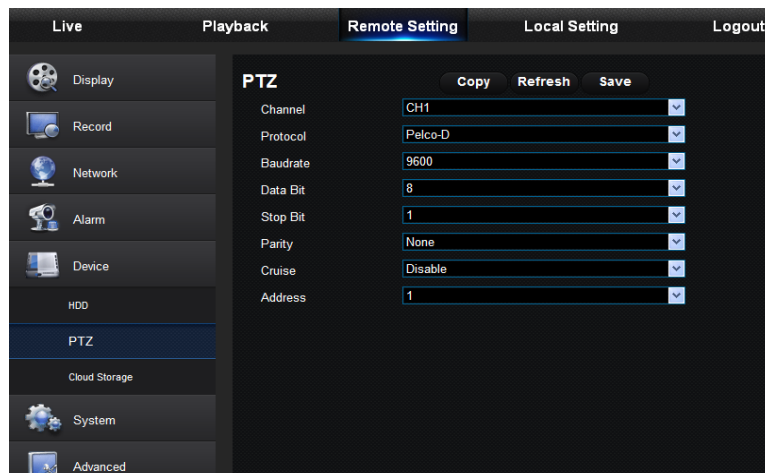


Picture 6-27

3. Cloud Storage

Set the relevant parameters of Cloud Storage. Detail setting should be consistent with IQDVR local setting. Please refer to Picture 6-28-1 and 6-28-2.

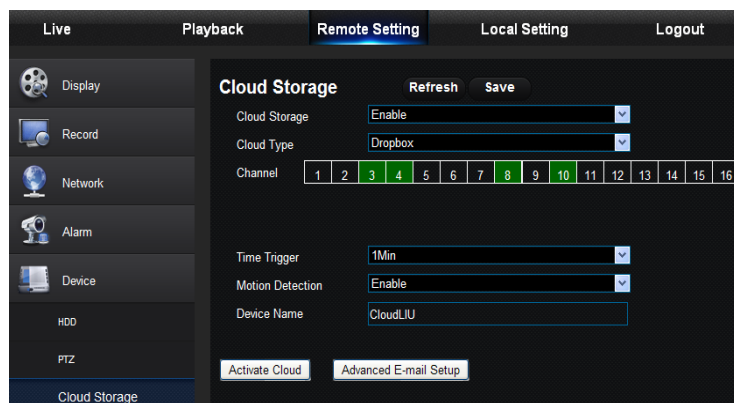

Picture 6-28-1

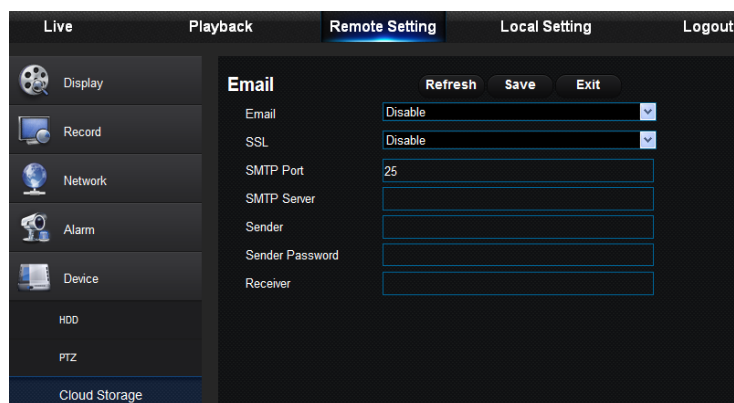


Picture 6-28-2

7.3.7 System

Click <System> option to unfold its sub-options: General, Users and Information.

1. General


Check IQDVR language and video system and set system time, date/time format, menu display time, DST and NTP parameters shown as Picture 6-29. Detailed setting should be consistent with IQDVR local setting.

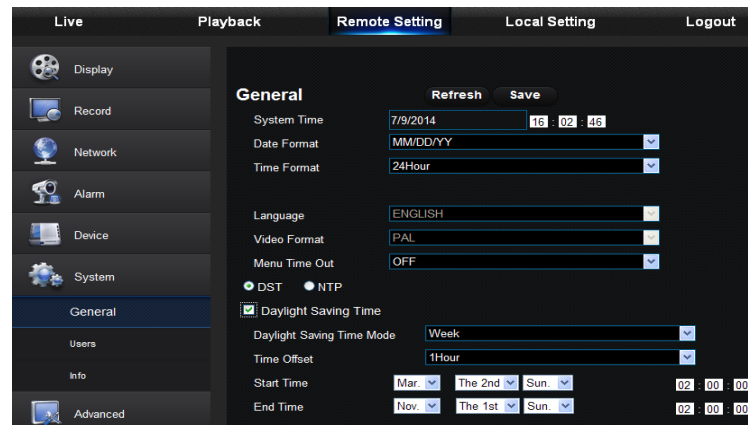

Picture 6-29

2. Users


Configure user name and password and detailed setting should be consistent with IQDVR local setting. Please refer to Picture 6-30.

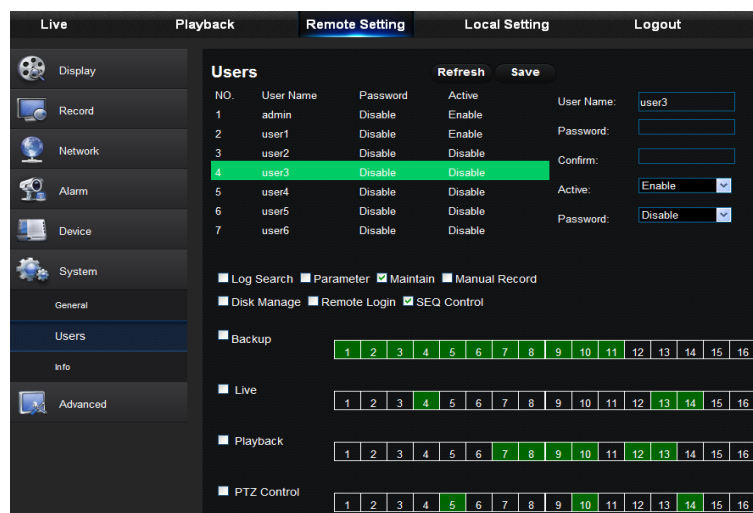

Picture 6-30

3. Information

Search device name, device number, device type, MAC address, software version, IE version and hardware version of IQDVR shown as Picture 6-31.

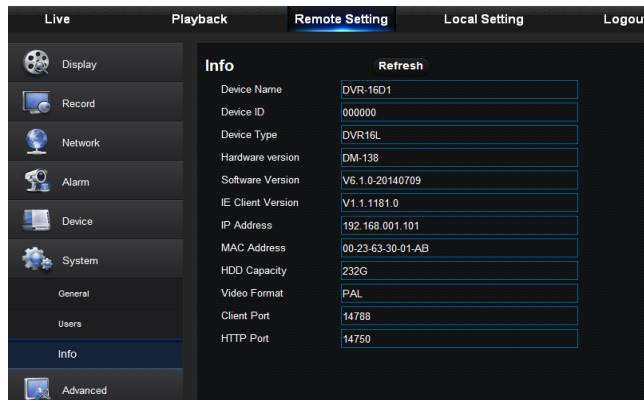


Picture 6-31

7.3.8 Advanced

Click Advance to unfold its sub-options: Firmware Update, Load default, Events and Maintain.

1. Firmware Update


Remotely update IQDVR system, as shown in Picture 6-32.

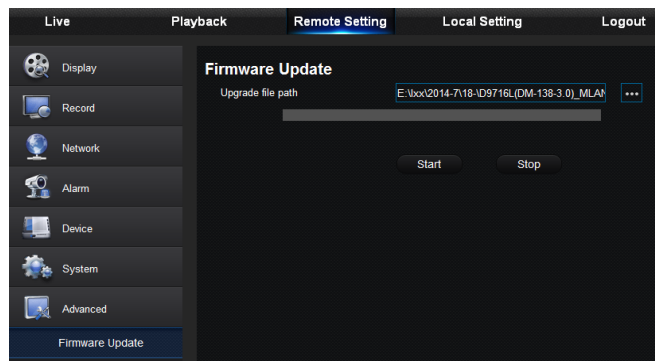

Picture 6-32

Updating procedure:


Firstly, select the update file path. The file format is .sw. Please refer to Picture 6-33.

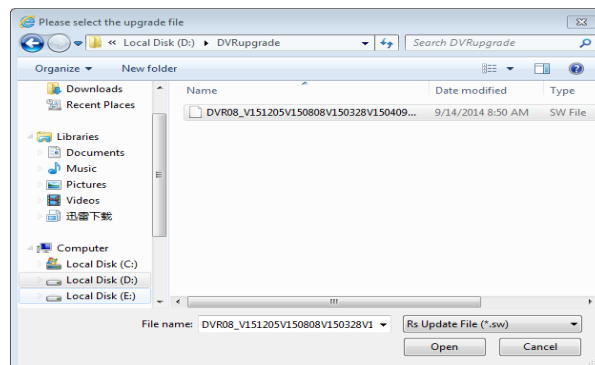

Secondly, click “Start” to start updating. The updating progress can be seen on the screen.

2. Load Default


Remotely restore default parameters of IQDVR, with same setting method as that of D IQDVR VR, shown as Picture 6-34.

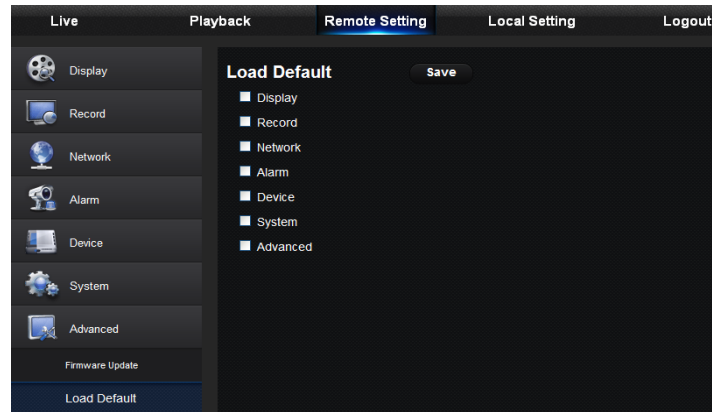

Picture 6-34

3. Events


Configure Event Type, Buzzer, Send Email, Show Message and other parameters shown as Picture 6-35. Detailed setting should be consistent with IQDVR local setting.

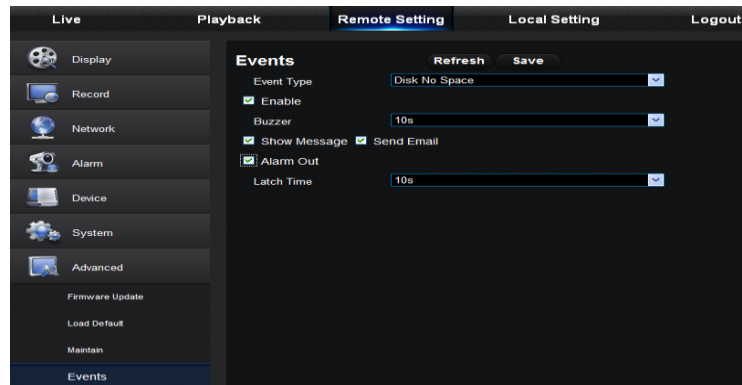

Picture 6-35

4. Maintain

Remotely set auto maintain time for IQDVR shown as Picture 6-36. Detailed setting should be consistent with IQDVR local setting.

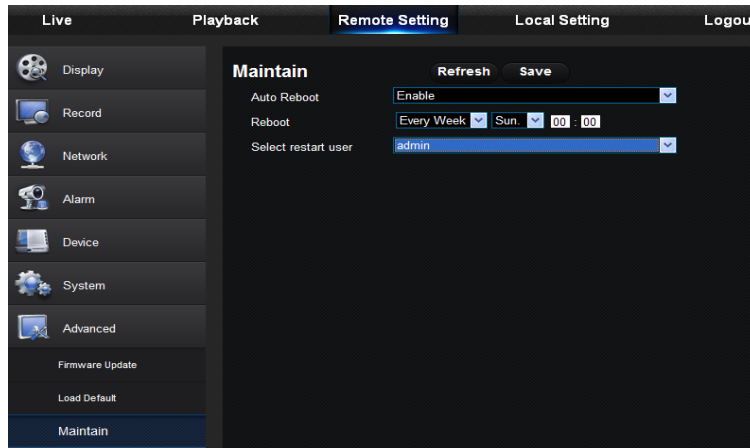


Picture 6-36

5. PEA, Perimeter and Trip Line setting

Perimeter: Refers to the prohibited area with any shape set by user in the field of view. In the area, the appearance and entry of the specified type of target will be detected. The specified area and type of target can be set in the client.

Trip line: It is also called Guard Line, set by user to mark prohibited direction in the field of view. When the specified type of target crosses the line and move in the same direction as the prohibited direction, it will alarm.


Detailed setting should be consistent with IQDVR local setting. Refer to Picture 6-37.

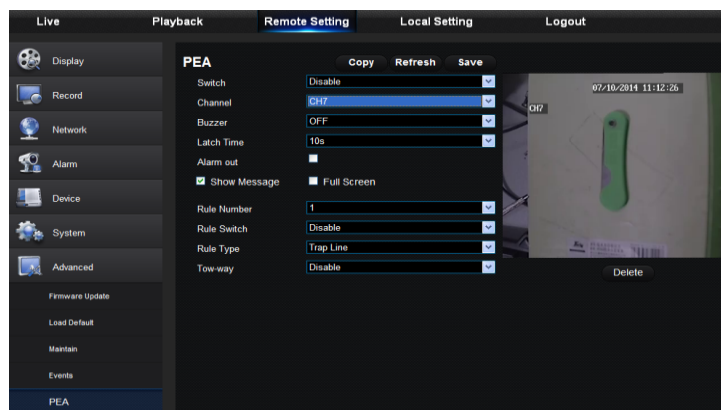

Picture 6-37

6. AVD Exception Detection


Totally 8 kinds of detection items: Brightness detection, Definition, Noise, Freeze, Signal loss, Scene change, artificial disturbance or if the PTZ loses control. Detailed setting should be consistent with IQDVR local setting. Refer to Picture 6-38 on the following page.

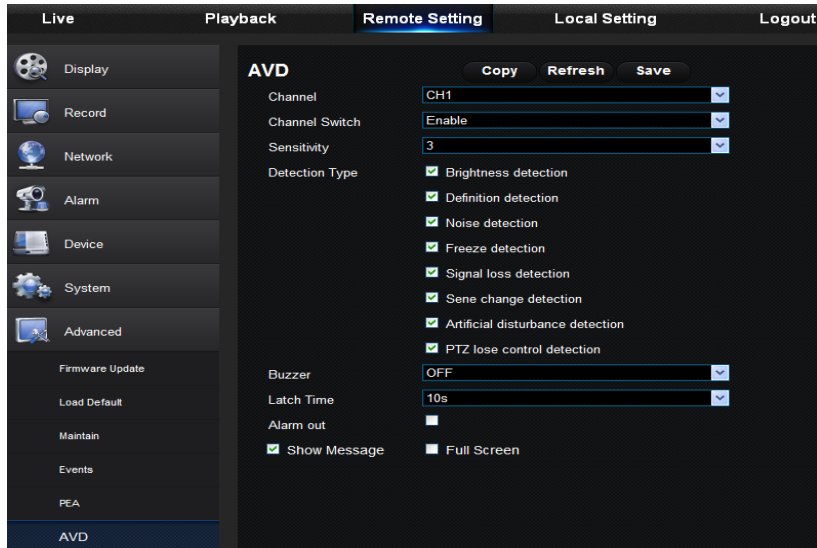

Picture 6-38

7. OSC Exception Detection


OSC includes two functions, i.e. legacy detection and lost detection. OSC can set up to 4 rules in a channel and each rule can be set as either legacy or lost. It can set up to 4 monitoring areas for each rule, so it can set up to 16 detection areas for each channel. Detailed setting should be consistent with IQDVR local setting. Refer to Picture 6-39.

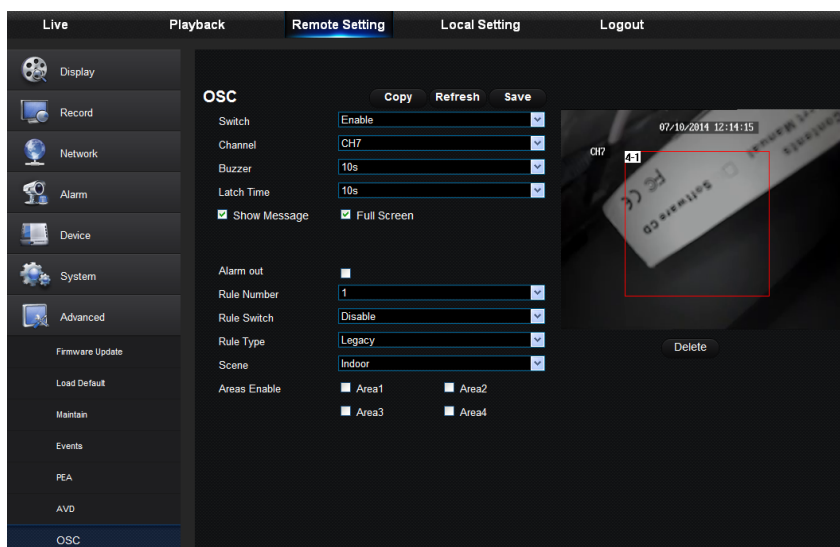

Picture 6-39

7.3.9 Local Setting

Set Record Path (save Live record and Playback clip file), Download Path for remote file, Snapshot Path for captured pictures, Interval for switching record files (Packaging time), and File type (H264 and AVI) shown as Picture 6-40.

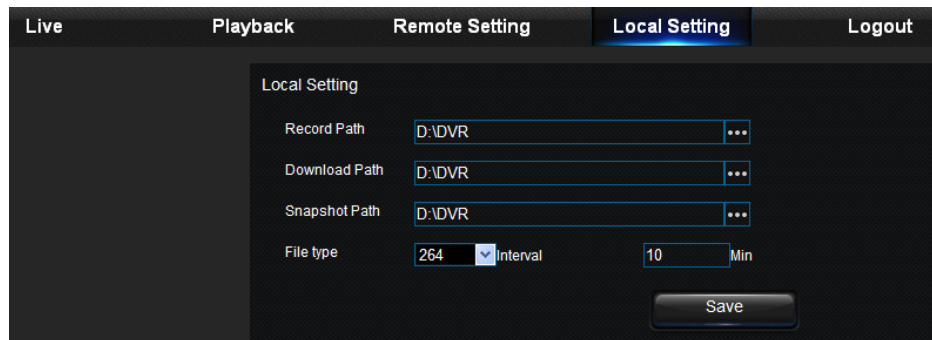

Picture 6-40

7.3.10 Logout

Click **Logout** to log out and return to the login interface.

Chapter 8 Appendix

8.1 Troubleshooting

1. Q: What can I do if the system does not detect the HDD?
A: Check if the power supply system is properly connected and data cord and power cables are securely connected. Check if your HDD is supported, please contact your place of purchase to confirm.
2. Q: I have changed the password but forgot the new password, how can I access the system?
A: If you forget system password, please contact your place of purchase or the Xvision Technical team. We strongly suggest to set a password that is easily remembered and relatively safe.
3. Q: Abnormal video signal or even no video signal by connecting the IQDVR and camera together. Power supply for both devices are OK. What is wrong?
A: Check HDMI/VGA cable at IQDVR side to see if the cable is firmly connected and if it is worn out and needs to be replaced, or to check if NTSC or PAL is selected consistently.
4. Q: How to prevent IQDVR from being influenced by heat?
A: The IQDVR needs to dissipate heat while it is running. Please place the IQDVR in a place with good air circulation and away from heat sources to ensure stability and life of the IQDVR.
5. Q: The remote control of the IQDVR doesn't work, the monitor screen is OK and panel keys are functional. Why?
A: Operate again by aiming the remote controller at the IR receiver on the front panel. If it still doesn't work, please check if the batteries in the remote controller are dying.
6. Q: I want to take out HDD from my PC and install it in IQDVR. Can it work?
A: Please check with your place of purchase that the HDD you wish to put in your IQDVR is compatible, also once you add a new HDD it will need to be formatted. You will lose all stored information on the HDD.
7. Q: Can I playback while recording?
A: Yes. The system supports the function of playing while recording.
8. Q: Can I clear some records on HDD of IQDVR?
A: In consideration of the file security, you may not clear part records. If you want to remove all the records, you can format HDD.
9. Q: Why can't I log in to the IQDVR client?
A: Please check if the network connection settings are correct and RJ45/CAT 5/6 port is with connected well. And check if your account and password are correctly input.
10. Q: Why can't I find any records during playback?
A: Please check if the data line connection for HDD is OK and system time is properly adjusted. Try a few times and restart. If it still doesn't work, check if the HDD is functioning correctly.

11. Q: The IQDVR cannot control PTZ?

A: Please check if:

1. Check the PTZ connection and power supply.
2. Protocol of PTZ decoder does not match that of IQDVR.
3. Address of PTZ decoder does not match that of IQDVR.
4. If many decoders are connected, the farthest side of AB line of PTZ decoder should be added 120Ω resistance to realize reflection suppression and impedance matching. Otherwise, PTZ control will be unstable.

12. Q: Why doesn't dynamic detection work?

A: Please check if the motion detection time and motion detection regional setting are correct and if the sensitivity is set too low.

13. Q: Why doesn't alarm work?

A: Not supported on IQR720D, only on the IQR1080D8/16.

14. Q: Why does buzzer keep alarming?

A: Please check the alarm setting, check if motion detection function is enabled and object motion is detected all the time and if I/O alarm is set as Always Off. Besides, refer to corresponding HDD alarm setting.

15. Q: Why can't I stop recording by pressing "STOP" button or click "Stop Recording" in context menu?

A: Pressing Stop or Stop Recording can only stop manual record, if you want to stop Scheduled recording in certain time quantum, please change the setting to No Record. To stop Startup recording, please change record mode to scheduled recording or manual recording. Then you may stop recording by the prescribed methods. Another way of stopping recording is to set channel as off status in record setting.

8.2 Usage Maintenance

1. To shut down IQDVR, please firstly shut down the system and then turn off the power. Do not turn off the power directly or the HDD data will be lost or damaged.
2. Please keep IQDVR away from heat sources.
3. Clean the internal dust regularly. Make sure the IQDVR has good ventilation this will ensure good heat dissipation.
4. Please check the HDD cable and data cable regularly to see if they are ageing.